Becker Traffic Assist 7928

→ 2 GB SD-CARD → TOUCH-SCREEN → EUROPEAN
NAVIGATION → REALITY VIEW → LANE INFO →
MP3-/VIDEO-PLAYER → TMC-FUNCTION → BLUETOOTH®

BECKER

Operating instructions

→ D
→ GB
→ F
→ I
→ E
→ P
→ NL
→ DK
→ S
→ N
→ FIN
→ TR
→ GR
→ PL
→ CZ
→ H
→ SK

Index 2
Safety information 6
The Traffic Assist 8
Use 8
Navigation 8
Music 8
Pictures 8
Video 8
Telephone 8
Unpacking the Traffic Assist 9
Checking the delivery 9
Delivery contents ***9***
Complaints procedure 10
Handling the packaging 10
Description of unit 10
Traffic Assist - basic unit 10
Cable for power supply from cigarette lighter 11
Mains adapter 11
Battery 11
SD memory card 11
USB connection cable 12
Unit bracket 12
Accessories 12
External GPS antenna ***12***
External microphone ***12***
Headset ***12***
Information about documentation 13
Quick start guide 13
Operating instructions 13
Registration 13
Repairs 13
Emissions and disposal 13
Overview Traffic Assist **14**
Maintenance and care 19
Battery quality declaration 20
Display quality declaration 20
Start-up 20
Memory card 20
Inserting memory card 21
Ejecting memory card 21
Power supply 22
Using the battery 22
Connecting to socket 22
Connecting up to power supply ***22***
Removing power supply ***23***
Connecting to the cigarette lighter 23
Unit bracket 23
Fitting the unit bracket 24
On the windscreen ***24***
Adjusting the unit bracket ***25***
Vertical ***25***
Horizontal ***25***
Attaching the Traffic Assist 25
Removing the Traffic Assist ***25***
TMC antenna 26
Installation of the TMC antenna 26
Connecting the TMC antenna 26
GPS-antenna 27
Unit antenna 27
Connecting up external antenna 27
Additional connections 27
Connecting the telephone mute function 28
Connecting the audio signal 28
Connecting USB storage media 28
Switching the Traffic Assist on/off 29
Switching on 29
Switching off 29
Basic information about the touch screen 30
Operation 30
Calibration 30
Basic information about the menus 30
The main menu 30
Entries made with the entry menu 30
Entering characters ***31***
Adopting suggestions ***31***
Scrolling through the lists ***31***
Special characters and umlauts ***32***
Entering numbers ***32***
Switching between upper and lower case ***33***
Deleting characters ***33***
Inserting spaces ***33***
The back key 33
Sensor button 34

Button lock 34
Activating the button lock ***34***
Deactivating the button lock ***34***
Volume control 34
More maps 35
Installation program 35
Transferring files 35
Transferring using the SD card reader 35
Transferring using the USB port 35
Transferring maps 36
Transmitting music tracks, pictures and videos 36
Faults 36

Navigational mode **37**

What is navigation? 37
Selecting navigation 38
Aids for navigation 38
Fast access mode ***38***
Navigation menu ***38***
Map display ***38***
Rapid access 38
Structure of rapid access 38
Navigation menu and map display ***38***
The list of destinations ***39***
Icons used ***39***
Operating rapid access 39
Starting using an existing destination ***39***
Scrolling in the destinations memory ***39***
Displaying or editing destination ***40***
The Navigation menu 41
Structure of the navigation menu 41
Address ***41***
Point of interest ***41***
Select on map ***41***
Enter coordinates ***41***
Route planning ***41***
Settings ***41***
Navigation menu: Address 42
Selecting a country ***42***
Select address and start ***42***
Cancelling navigation ***48***
Navigation menu: Point of interest 48
Point of interest: Near GPS position ***48***
Point of interest: nationwide ***49***
Navigation menu: Select on map 51
Navigation menu: Route planning 52
Route list ***52***
Using a route ***53***
The New button ***53***
The Edit key ***54***
The Calculate key ***54***
The Start key ***55***
Navigation menu: Enter coordinates 55
Navigation menu: Settings 56
The Auto mode key ***56***
The Map info key ***57***
The Routing options key ***58***
The Route info key ***59***
The Format key ***59***
The Speed key ***60***
The Time Zone key ***61***
The Smart Speller button ***61***
The Junction info button ***62***
The Home address button ***62***
The TMC button ***63***
The Volume key ***64***
The Dimmer button ***64***
The button Load map ***64***
The Factory settings key ***65***
What is dynamic route guidance? 65
Displaying TMC messages on the map 66
Using TMC 66
Reading a message ***67***
Display the relevant road in the map ***67***
Updating announcements ***67***
Taking announcements into consideration when calculating routes 67
Automatic recalculation ***67***
Manual recalculation ***68***
Map display 68
Configuration of map display 69
Map display without route guidance ***69***
Map display with route guidance ***69***
Map display with reality view ***70***
Map display with toolbar ***70***
Using the map display 71
Repeat the last voice prompt ***71***
Changing the announcement volume ***71***
Additional information ***72***
Position information ***72***

→ D
→ GB
→ F
→ I
→ E
→ P
→ NL
→ DK
→ S
→ N
→ FIN
→ TR
→ GR
→ PL
→ CZ
→ H
→ SK

Zooming and the map (toolbar) ***72***
Display route (toolbar) ***72***
Displaying TMC messages (toolbar) ***73***
Change display (toolbar) ***73***
Point northwards (toolbar) ***73***
Available POIs along the route (toolbar) ***73***
Move map (toolbar) ***75***
Calling up the options menu (toolbar) ***75***
Playback of MP3 files during an active navigation ***76***

Telephone mode **77**
Calling up telephone mode 77
Telephone fast access mode 77
Configuration of fast access mode 77
Number list ***78***
Icons used ***78***
Operating in fast access mode 78
Dialling an existing number ***78***
Scrolling through the number list ***78***
Displaying or editing entries ***79***
Telephone menu 79
Dialling a number 80
Telephone book 80
Connecting a mobile phone 81
Opening the device list ***81***
Connecting automatically ***82***
Searching for a mobile phone ***82***
Connecting from the device list ***83***
Telephone/Bluetooth settings 83
Switching Bluetooth on/off ***83***
Visibility of the Traffic Assist ***83***
Device name ***84***
Setting telephone and ringtone volume ***84***
Telephone calls 84
Establishing a call 84
Answering a call 85
Ending a call 85
When route guidance is active ***85***
Without route guidance ***85***

Music operations **86**
Selecting music playback 86
The MP3 player 86
Operating the MP3-Players 86
Track skip ***86***
Play ***87***
Pause ***87***
Cancelling playback ***87***
Folder overview ***87***
Track repeat/random play function ***88***
Setting volume ***88***
Activating FM transmitter ***89***
Navigation during MP3 player operation ***89***
Shutting down the MP3-Player ***89***

Pictures mode **90**
Selecting pictures display 90
The Picture Viewer 90
Operating the Picture Viewers 90
Scrolling ***90***
Slideshow ***90***
Full screen ***91***
Shutting down the Picture Viewer ***91***
Folder viewing mode 91
Operating folder viewing mode 92
Subfolders ***92***
Scrolling ***92***
Selecting a picture ***92***
Changing folder levels ***92***
Closing folder viewing mode ***92***
Setting the volume ***92***

Video mode **93**
Selecting video playback 93
The video player 93
Operating the video player 93
Opening and playing videos ***93***
Showing the button bar while video is playing ***94***
Pausing and resuming playback ***94***
Fast forward/reverse ***94***
Setting the volume ***94***

Settings **95**
Selecting the settings 95
The setting menu 95
Operation 95
Selection possibilities ***95***
Closing the setting menu ***95***
The individual menu points 95
Energy 95
Displaying the energy supply ***95***
Ending the status display ***96***
Day/night display 96
Calibration 96
Starting calibration ***96***
Language 97
Calling up language selection ***97***
Turn the page ***97***
Selecting the language ***97***
Cancelling the language selection ***97***
Moodlight 97
Tones 98
Automatic on/off 98
Switching the function on / off ***98***
FM transmitter 98
Storing frequencies ***99***
Information 100
Specialist words **101**
Keywords **103**
Technical Data **106**
NOTICE **107**
EU Declaration of Conformity 107
Disposal 108

The information and data contained in these documents are subject to change without prior notice.
No part of these documents may be reproduced or transmitted for any purpose without express written permission from HARMAN/BECKER Automotive Systems GmbH . All technical information, drawings etc. are subject to copyright law.
© Copyright 2007, HARMAN/BECKER Automotive Systems GmbH
All rights reserved.

→ D
→ GB
→ F
→ I
→ E
→ P
→ NL
→ DK
→ S
→ N
→ FIN
→ TR
→ GR
→ PL
→ CZ
→ H
→ SK

⚠Safety information

- *The unit may only be operated if the traffic situation allows for this and if you are absolutely certain that you yourself, your fellow passengers or other road users will not be put at risk, encumbered or disturbed by this.*
- *The rules of applicable road traffic acts must be observed at all times. Destinations may only be input when the vehicle is stationary.*
- *The navigational system is only an aid. The data/details provided may in some cases be incorrect. The driver must always decide whether to follow the details given or not. We accept no liability for the navigational system issuing incorrect details. As a result of traffic routing changes and deviating data, inaccurate or incorrect instructions may be given. Drivers should always pay attention to the actual road signs and traffic control. In particular, the navigational system cannot be used as a means of orientation in cases of poor visibility.*
- *The unit may only be used for its intended purpose. The volume of the navigational system should be set so that noises outside the vehicle can still be heard.*
- *The unit should be switched off immediately if faults occur (e.g. development of smoke or smells).*
- *For safety reasons, the unit may only be opened by a specialist. Please contact your local stockist if you require repairs.*

- *The SD memory card can be removed. Caution! Small children could swallow it.*
- *The mains voltages (V) indicated on the mains charger, the car charger adapter and the unit must not be exceeded. Failure to observe this can result in destruction of the unit and the charger as well as explosion of the rechargeable battery.*
- *Never open the unit or the rechargeable battery. Any modification to the unit is also impermissible and renders the type approval invalid.*
- *Use only genuine BECKER original accessories. This will ensure that all the relevant regulations are complied with and damage to health and property is avoided. Dispose of defective units and the rechargeable battery according to the applicable legal requirements.*
- *No warranty is granted in the case of improper use. These safety instructions also apply to genuine BECKER original accessories.*

→ D
→ GB
→ F
→ I
→ E
→ P
→ NL
→ DK
→ S
→ N
→ FIN
→ TR
→ GR
→ PL
→ CZ
→ H
→ SK

→ D
→ GB
→ F
→ I
→ E
→ P
→ NL
→ DK
→ S
→ N
→ FIN
→ TR
→ GR
→ PL
→ CZ
→ H
→ SK

Use

The Traffic Assist is a powerful PND (*P*ersonal *N*avigation *D*evice) for use in vehicles and closed spaces. The unit should be protected from dampness and dirt.

The Traffic Assist can be used as:

- navigational unit
- MP3 (device for playing music)
- JPEG picture viewer
- Video player
- Can be used as a very convenient hands-free unit via Bluetooth®

Navigation

Thanks to GPS = *G*lobal *P*ositioning *S*ystem, you no longer need to spend hours searching through road atlases.
Once outside buildings, the receiver antenna integrated in the unit gives you continuous access to navigational possibilities. Depending on reception, you may not be able to use the navigational function inside buildings. When used in vehicles, you may not be able to adequately receive GPS data depending on how the Traffic Assist is installed. In such cases, you will have to connect up an external antenna (does not fall within the scope of supply).
The Traffic Assist with TMC is equipped with TMC, which gives you the option of receiving traffic announcements via the TMC antenna provided. Traffic announcements are transmitted when the TMC is active. The system plans an alternative route automatically or on request to avoid traffic problems, depending on the setting.

Music

Thanks to the integrated MP3-Player, you can listen to your favourite tracks when on the go.

Pictures

The Traffic Assist has a Picture Viewer offering many functions for viewing pictures.

Video

Traffic Assist features a video player for playing videos.

Telephone

Your Traffic Assist is equipped with Bluetooth® wireless technology. You can connect a mobile phone equipped with Bluetooth® wireless technology to it via Bluetooth. Your Traffic Assist the serves as a very convenient hands-free unit.

Unpacking the Traffic Assist

Note:

Your Traffic Assist is supplied in stable packaging. Do not unpack the unit in full if you discover any serious damage to the packaging or its content. If this happens, please contact your local stockist.

Checking the delivery

Before the Traffic Assist is started up, the delivery should be checked to ensure that it is complete and in the correct condition (see also page 14).

→ Carefully unpack the content of the package and check it.

Delivery contents

1 Traffic Assist, the mobile navigation system with integrated MP3 player, video player, picture viewer and extremely convenient Bluetooth® hands-free unit.
2 Docking station
3 Memory card (SD memory card) with pre-installed map data
4 USB cable
5 Mains adapter for power supply via the 230 V mains
6 Unit holder
7 TMC antenna
8 12V car power adapter for cigarette lighter socket
9 DVD with installer for map data, actual map data and operating instructions (not illustrated).

Complaints procedure

Please contact your local stockist if you have any complaints. The unit can also be sent directly to Harman/Becker in its original packaging.

Handling the packaging

Keep the original packaging in a dry place, at least for the warranty period.

Note:

The packaging should be disposed of correctly in accordance with national disposal guidelines. The packaging must not be burnt. Depending on the country to which the unit is supplied, it may be possible for local stockists to accept packaging.

Description of unit

The Traffic Assist consists of the basic unit Traffic Assist and the accessories included in the delivery.
You will find photos of the individual parts under:

• "Overview Traffic Assist" on page 14

Note:

The basic unit and accessories must not be opened or modified in any way.

Traffic Assist - basic unit

The basic unit contains all the electronics:

- an integrated antenna,
- a TMC receiver for the reception of traffic messages,
- a touchscreen,
- sensor buttons for operation,
- an integrated loudspeaker for the output of messages during navigation and for MP3 files and phone calls,
- a microphone.

On the sides of the unit, there are also light bars as well as various connections and ports.

You will find more details of the unit under:

• "Technical Data" on page 106

Cable for power supply from cigarette lighter

This cable allows the unit to be connected up to the car's cigarette lighter.
The power supply must satisfy the following requirements:

- DC current 12 volts
  0.5 amps

Mains adapter

This mains adapter enables the Traffic Assist to be connected to a mains outlet.
Requirements for power supply are:

- Alternating current
  100-240 volts
  0.2 Amps
  50-60 Hertz

Battery

When depleted, the integrated rechargeable battery can be recharged by connecting the Traffic Assist to the power supply. For this purpose, connect the unit to a computer via the USB connecting cable, connect it to a 12 V socket in a vehicle using the car power adapter, or charge it using the mains power supply unit connected the 230 V grid.

SD memory card

A memory card is used as a storage medium for road maps, music tracks and images.
The memory card provided has a storage capacity of 2 GB and offers sufficient space for the complete European map set, the Traffic Assist does not support larger memory cards. If you intend to listen to music using the Traffic Assist or want to view images, you must save these to a separate card (not included).

Alternatively, you can connect a USB memory stick to the USB port to play MP3 files or display images.

Notes:

The complete European map set requires approximately 1.8 GB of memory space.
If you intend to listen to music, look at pictures or watch videos on the Traffic Assist. We recommend that you store the relevant data on a separate memory card (not included in scope of delivery).
If you would like to listen to music with the Traffic Assist during navigation, the music must be stored on the supplied memory card. The Traffic Assist does not support the changing of memory cards during navigation.

When not in the unit, the memory card must be stored in a protected dry place away from direct sunlight in the packaging supplied. Avoid touching or dirtying the contact strip.

You will find more details about the memory card under:

- "Technical Data" on page 106

USB connection cable

The USB connection cable can be used to connect the unit to a standard personal computer by means of the USB port. However, to use the data on the PC, you will first have to install the free "Active Sync" software from Microsoft®.

Unit bracket

The Traffic Assist can be attached in the vehicle with the unit holder and the docking station.

Accessories

External GPS antenna

You can use an external antenna to improve reception in vehicles where only limited GPS reception is available (not included in the scope of supply). Please contact your local stockist for more information.

External microphone

The internal microphone of the Traffic Assist is unable to achieve satisfactory voice quality if the Traffic Assist is unfavourably positioned in the vehicle.
In these cases, please use the optionally available external microphone. Please consult your local specialist dealer.

Headset

When using the Traffic Assist as an MP3 player, commercially available headphones with a 3.5 mm jack or adapter can be connected (not included).

⚠Danger!

Prevention of damage to hearing

The use of headphones or earphones over a relatively long period of time at a high volume may cause permanent damage to your hearing.
Conformity with the limits for sound pressure laid down in the standard NF EN 50332-1:2000 as required by French Article L. 5232-1 is guaranteed.

Note:

Headphones must not be used while driving. Comply with the local national laws and regulations.

Information about documentation

Quick start guide

The Quick Start Guide is designed to provide a brief introduction to operating your Traffic Assist. The most important basic functions of the Traffic Assist are explained in the Quick Start Guide.

Operating instructions

A comprehensive explanation of the Traffic Assist functionalities is contained in these operating instructions.

Registration

You can register your product using our software service, we will then inform you of any new updates and other news.

You can register online on the Becker homepage www.mybecker.com.

The “Software update” menu item is located under “SERVICE/SUPPORT“.

Repairs

The unit must not be opened if damaged. Please contact your local stockist.

Emissions and disposal

Information on emissions, electromagnetic compatibility and disposal can be found in "NOTICE" on page 107.

→ D
→ GB
→ F
→ I
→ E
→ P
→ NL
→ DK
→ S
→ N
→ FIN
→ TR
→ GR
→ PL
→ CZ
→ H
→ SK

Scope of delivery

1 Traffic Assist – PND (*P*ersonal *N*avigation *D*evice)
2 Docking station
3 Unit holder
4 Antenna for TMC reception
5 Cable for power supply via vehicle cigarette lighter (12 V)
6 Mains adapter for power supply via the 230 V mains
7 USB connecting cable
8 SD card (with navigation data)

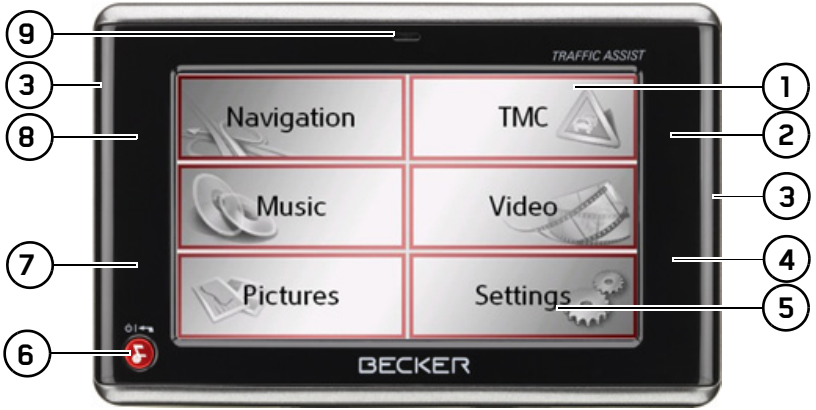

Front of unit with control and display elements

1 Touch screen with selected main menu

2 Map display sensor button area (see "Map display" on page 68)

3 Light bar (mood light)

4 Home address sensor button area (see "Structure of rapid access" on page 38)

5 Touchscreen button
Press = activates the respective button command

6 BACK button
Press = returns to various applications
Press and hold = switches Traffic Assist on and off

7 Day and night changeover sensor button area (see "Sensor button" on page 34)

8 Telephone sensor button area (see "Calling up telephone mode" on page 77)

9 Microphone

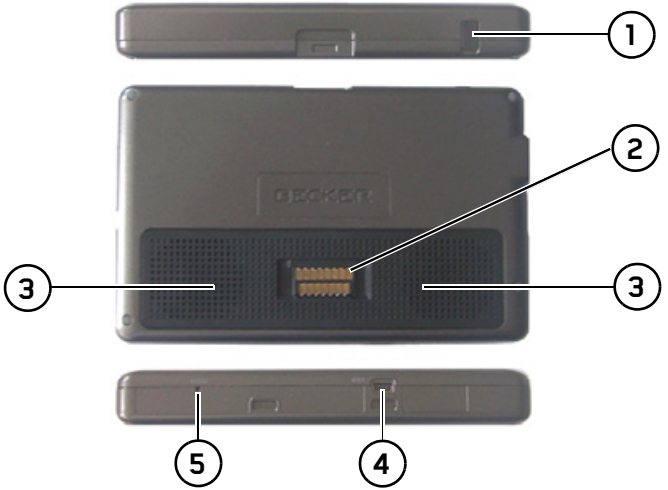

Top of unit

1 Socket for external antenna (external antenna not included in scope of delivery)

Back of unit

2 Docking station interface

3 Opening for speaker

Base of unit

4 USB interface PC connection

5 Reset button

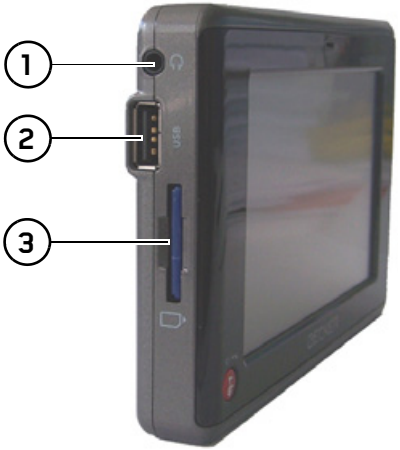

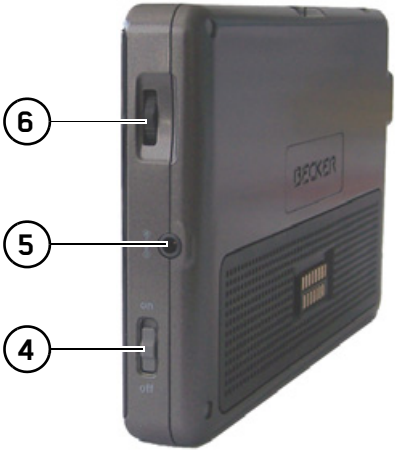

Left side of unit

1 3.5 mm socket for headphones (headphones not included in scope of delivery)

2 USB port for data carrier containing MP3 or image files

3 SD card slot

Right side of unit

4 On/Off switch

5 Connection for external power supply

6 Volume control
Move upwards = increase volume
Move downwards = decrease volume

Press = mute

→ D
→ GB
→ F
→ I
→ E
→ P
→ NL
→ DK
→ S
→ N
→ FIN
→ TR
→ GR
→ PL
→ CZ
→ H
→ SK

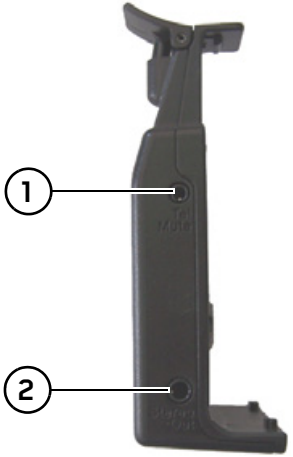

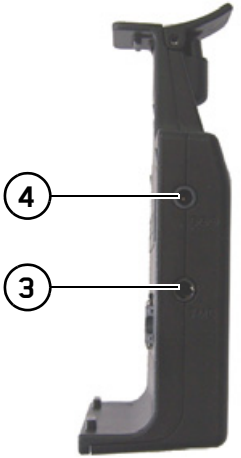

Left docking station

1 Connection for telephone-mute lead (accessory)

2 Connection for audio-signal lead (accessory)

Right docking station

3 Connection for TMC antenna

4 Connection for external power supply

Maintenance and care

The unit is maintenance-free.
For proper care, a commercially available cleansing fluid for electrical devices may be applied using a soft damp cloth.

⚠Danger!
Danger to life by electrocution. Always switch off the unit and disconnect the mains power supply unit before cleaning the unit, supplied components, or accessories.

Note:
Do not use any aggressive or abrasive substances or cloths which may damage the surface.
The unit must not be exposed to water.

Your mobile navigation system was designed and manufactured with great care and should be treated with equal care. You will enjoy your mobile navigation system for a long time to come if you observe the recommendations listed in the following:

- "Protect your mobile navigation system from water and moisture. If your unit is exposed to moisture, switch it off immediately and disconnect the power supply. Allow the unit to dry at room temperature.
- Do not operate your mobile navigation system in a dusty or dirty environment and do not store it in such an environment.
- Do not store your mobile navigation system in hot environments. High temperatures can shorten the service life of electronic components in your unit, damage the rechargeable batteries and cause certain plastics to warp or melt.
- Do not store your mobile navigation system in cold environments. During operation, when the unit warms up to operating temperature, moisture may form internally, causing damage to electronic components.
- Do not drop your mobile navigation system unit, protect it from shocks and do not shake it. Improper handling can damage components within the unit.
- Never use corrosive or aggressive chemicals, cleaning solutions or aggressive detergents for cleaning.

All the above information applies equally to the mobile navigation system, the rechargeable battery, the mains charging and car power adapters as well as all accessories. Should one of these parts not work properly, please contact your authorised dealer.

→ D
→ GB
→ F
→ I
→ E
→ P
→ NL
→ DK
→ S
→ N
→ FIN
→ TR
→ GR
→ PL
→ CZ
→ H
→ SK

Battery quality declaration

The capacity of the rechargeable battery in your mobile navigation system decreases with every charging/discharging cycle. Improper storage at excessively high or low temperatures may also cause a gradual deterioration of capacity. Consequently, the operating time may be substantially reduced even in the case of a fully charged battery.
The rechargeable battery is designed such that it should certainly still be possible for it to be charged and discharged after 6 months of operation of your mobile navigation system. In the event of a significant loss of capacity, we recommend replacement of the rechargeable battery. Please contact your authorised dealer. Use only genuine BECKER original spare parts.

Display quality declaration

In some cases, for technical reasons, a few discoloured dots (pixels) may be visible on the display. Some pixels may also appear brighter or darker. However, such instances do not represent a product flaw.

Start-up

Once the Traffic Assist has been unpacked and checked for damage, the unit can be started up. The individual start-up stages are:

- insert memory card
- connect to power supply
- Switching on the unit
- Ensuring antenna reception (if navigation is desired)

Memory card

The memory card provided has a storage capacity of 2 GB and offers sufficient space for the complete European map set, the Traffic Assist does not support larger memory cards.
The complete European map set requires approximately 1.8 GB of memory space.
If you intend to listen to music, look at pictures or watch videos on the Traffic Assist. We recommend that you store the relevant data on a separate memory card (not included in scope of delivery).
If you would like to listen to music with the Traffic Assist during navigation, the music must be stored on the supplied memory card. The Traffic Assist does not support the changing of memory cards during navigation.

Notes:

A small slider is located on one side of the card.

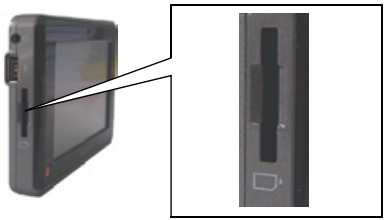

The card slot is located on the left side of the unit. The card compartment is equipped with a spring-actuated lock and ejection mechanism.

Notes:

The memory card should only ever be inserted and ejected when the unit is switched off. If the unit is not switched off, data may be lost.
Navigational operations are not possible if the memory card containing card data is not inserted. If you remove this during navigation, directions to your destination will be aborted immediately.

Inserting memory card

→ Remove the memory card from its packaging without touching or soiling the contact bar.
→ Hold the memory card such that the contact bar faces towards the rear of the unit.
→ Guide the memory card into the card slot.

→ Exert a little pressure and slide the memory card into the card slot until it snaps in.

Ejecting memory card

The card slot ejects the card so that you can pull it out with two fingers.
→ Use your finger to gently press the memory card against the spring force into the card slot and then release it.
The card is ejected.
→ Remove the memory card and place it in the packaging while ensuring not to touch contact bar.

Power supply

At home, the Traffic Assist can be powered by means of the supplied mains power supply unit. In the vehicle, the cable for the cigarette lighter can be used (also supplied). In both cases, the internal battery of the Traffic Assist is charged. The power supply can either be connected directly to the Traffic Assist, or to the docking station.

Notes:

- Please note that TMC reception is only possible when the power supply is connected to the docking station.
- If the unit battery is completely discharged, connect the power supply. It may take up to a minute before the Traffic Assist can be switched on again.

Using the battery

The internal power supply is via the integrated rechargeable battery. The rechargeable battery is maintenance-free and does not require any particular care.

Note:

Please note that with a completely discharged battery, the unit requires up to one minute until it can be switched on again.

Connecting to socket

⚠Danger of Death!

Make sure that your hands are not damp and that the mains section is dry. Only connect the mains section to a mains supply with which such purposes are permitted.

Connecting up to power supply

The mains power supply unit is connected to the public mains grid as follows:

→ Hold the connector and push it, without using excessive force, to the stop in the relevant connecting socket on the Traffic Assist or the docking station.

→ Use the plug to insert the mains section in the socket.

Removing power supply

→ To remove the power supply, proceed in reverse.

Note:

Remove the mains section if you are not planning on using the Traffic Assist for a long time.

Connecting to the cigarette lighter

Note:

If the cigarette lighter has just been used and is still warm, wait until this has cooled down in its mounting.

Power supplies using a vehicle battery are connected up as follows using the cable supplied for the cigarette lighter.

→ Hold the connector and push it, without using excessive force, to the stop in the relevant connecting socket on the Traffic Assist or the docking station.

→ Plug the plug adapter into the cigarette lighter.

Note:

If the engine is switched off, using the vehicle's power supply through the cigarette lighter will slowly drain the vehicle battery! Do not therefore operate the Traffic Assist for extended periods with the engine off.

Unit bracket

The Traffic Assist can be attached directly to the windscreen with the unit holder.

Note:

The Traffic Assist and unit bracket must not be exposed to long periods of direct sunlight. Temperatures inside the vehicle of +70 C and higher may damage parts of the bracket.

→ D
→ GB
→ F
→ I
→ E
→ P
→ NL
→ DK
→ S
→ N
→ FIN
→ TR
→ GR
→ PL
→ CZ
→ H
→ SK

1 Fastening screw
2 Fastening screw
3 Lever
4 Suction surface
5 Base
6 Docking station
7 Clip
8 Carrier plate

Fitting the unit bracket

Note:

Fasten the unit holder such that your field of vision is not impaired when the Traffic Assist is installed and ensure that the unit is outside the deployment area of the airbag.
Ensure that the electrical connection cable does not hamper you from accessing the vehicle's controls.
Also ensure that there is enough space to easily slide the Traffic Assist back out of the bracket.
Clean the attachment surface on the windscreen to ensure that it is clean and free of grease. Do not use greasy or soapy cleaning agents.

On the windscreen

The unit holder can be attached directly to the windscreen via the suction mechanism.

→ Find a suitable position.
→ Press the base (5) with its suction surface against the windshield.
→ Rotate the unit bracket so that the support plate is roughly in the direction of viewing required.
→ Press the lever (3) downwards.

The bracket will have stuck firmly to the windscreen. It can now be set precisely. To remove, actuate the lever (3) again.

Adjusting the unit bracket

The support plate (7) can be swung in two directions (horizontally and vertically). It can thereby be set at virtually every angle of vision to the driver.

Note:

Do not swing the support plate in both directions at the same time! Before moving, always take the Traffic Assist off the unit bracket.

Vertical

→ Loosen the fastening screw (2) far enough to be able to swivel the carrier plate (8) downwards from above without using excessive force.

→ Hold the base (5) with one hand and swivel the carrier plate (8) to the desired position with the other hand.

→ Tighten the fastening screw (2) sufficiently so that the Traffic Assist is held securely in place when the vehicle is in motion.

Horizontal

→ Loosen the fastening screw (1) far enough to be able to swivel the carrier plate (8) from left to right without exerting excessive force.

→ Hold the base (5) with one hand, and swivel the carrier plate (8) to the desired position with the other hand.

→ Tighten the fastening screw (1) sufficiently so that the Traffic Assist is held securely in place when the vehicle is in motion.

Attaching the Traffic Assist

The docking station (6) is equipped with four guides, the carrier plate (8) has corresponding retaining lugs.

→ Position the docking station with the guides onto the carrier plate retaining lugs.

→ Push the docking station downwards to the stop.

The Traffic Assist has attachment points for the docking station on the top and bottom of the housing.

→ Insert the Traffic Assist with the attachment points on the bottom of the housing into the docking station.

→ Press the Traffic Assist into the docking station without using excessive force until the clip (7) engages in the attachment point.

Removing the Traffic Assist

→ Press the clip (7) on the unit holder with one finger and remove the unit from the unit holder using your free hand.

TMC antenna

The TMC antenna included in the accessories is used to receive traffic messages. The antenna is included separately in the scope of delivery and has to be mounted onto the unit holder.

Installation of the TMC antenna

→ Remove the fastening screw (1) completely.
→ Push the side of the TMC antenna with the (4) slot over the (3) lug on the (2) holder.
→ Align the hole on the other side of the TMC antenna (3) so that it is positioned over the screw hole for the fastening screw.

→ Install the fastening screw (1) again.

The antenna is now mounted.

Connecting the TMC antenna

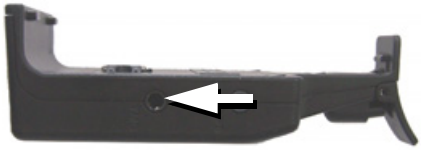

→ Insert the connector of the TMC antenna into the socket provided on the right-hand side of the docking station without using excessive force.

GPS-antenna

Unit antenna

The GPS antenna is integrated into the housing.

Note:

The integrated GPS antenna is not suitable for use in vehicles with anti-glare windows (metalised thermo-glass or metal foil, indicated by the window label - SIGLA SOL, SIGLA CHROM, SIGLA, KOOL-OF, SUNGATE, etc.) and vehicles with fine-meshed heating wires in the windows.
If this is the case, use an external GPS antenna. Please consult your local specialist dealer.

Connecting up external antenna

To enable reception under adverse reception conditions, an external GPS antenna can be connected (not included). For this purpose, a closable connecting socket is located on the rear of the housing. If no external antenna is connected, this connection must always be closed again.

→ Open the closure by pulling gently on its upper surface.
→ Connect the external antenna using the optionally available adapter.

Additional connections

Further connections are provided on the docking station. These connections can be used to connect the Traffic Assist to an audio system already installed in the vehicle.

Note:

Please note that the following connection options are not possible for all audio systems.

→ D
→ GB
→ F
→ I
→ E
→ P
→ NL
→ DK
→ S
→ N
→ FIN
→ TR
→ GR
→ PL
→ CZ
→ H
→ SK

Connecting the telephone mute function

You can connect your Traffic Assist to your audio system using an optionally-available cable for the telephone mute function.

If the cable is correctly connected, your Traffic Assist will mute the car radio during navigation announcements.

→ Insert the jack on the cable into the socket on the docking station for this purpose.

→ Connect the other end of the cable to the telephone mute socket on your radio.
Please observe the manufacturer's connection specifications.

Connecting the audio signal

You can connect your Traffic Assist to your audio system using an optionally-available cable for output of the audio signal.

If the cable is correctly connected, you can then output the audio signal via the vehicle audio system.

→ Insert the jack on the cable into the socket on the docking station for this purpose.

→ Connect the other end of the cable to the audio inputs on your audio system.
Please observe the manufacturer's connection specifications.

Connecting USB storage media

You can connect a USB memory stick or an external hard drive to your Traffic Assist.

Images, music or videos can then be accessed from these storage media.

Notes:

- Only external hard drives with a maximum power consumption of 500mA may be operated. The hard drive can only be operated when the Traffic Assist is powered via the mains adapter or via the car power adapter.
- Please note that when using USB memory sticks to play MP3 files or display images or videos, the battery capacity may be considerably reduced (without external power supply).

The USB port for storage media is located on the left side of the unit.

Switching the Traffic Assist on/off

The unit is switched on and off using the back key.

Note:

Please deactivate the Becker moodlights while driving in your vehicle in order to prevent visual distraction from the road traffic!

Switching on

→ Set the On/Off switch on the right side of the unit to On.
→ Press the back key for a few seconds.
The unit is switched on. The manufacturer's logo appears on the touch screen.

The following question appears shortly thereafter: **Comply with highway code**

→ If you agree with this request, press the **OK** key.

Note:

The Traffic Assist may only be used in accordance with the applicable national road traffic act!

Switching off

You can switch the unit off at any time. If necessary, new destinations should first be saved.
→ Press the back key for a few seconds.
The unit will enter sleep mode.
→ Switch the On/Off switch to Off for final deactivation of the unit.

→ D
→ GB
→ F
→ I
→ E
→ P
→ NL
→ DK
→ S
→ N
→ FIN
→ TR
→ GR
→ PL
→ CZ
→ H
→ SK

Basic information about the touch screen

The Traffic Assist is fitted with a touch screen.

Note:

To ensure that the display's surface is not damaged, you may only touch it with your fingers or a blunt, non-smearing object.

Operation

The buttons which appear in the menus or message windows should simply be touched so that they are displayed as if they had been pressed.

If the key pressed is not permitted in the current situation, a short signal will sound.

Calibration

If the touch screen starts responding imprecisely and e.g. buttons have to be touched off-centre in order to be actuated, calibration should be undertaken.

The calibration function is started from the Settings menu (see also page 96).

Basic information about the menus

During operations, you are assisted by various menus and entry windows.

The main menu

The top menu level is the main menu. The individual applications are started from the main menu.

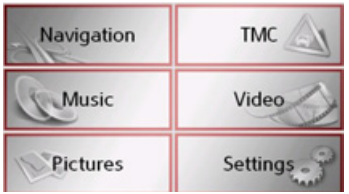

You will find information about the individual applications in the corresponding main chapters.

Entries made with the entry menu

Some applications require entries to be made via the entry menu. The entry menu is operated in a similar way to a keypad.

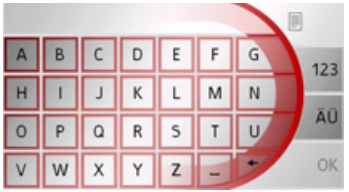

The character entered on the keypad is displayed in the top line of the entry menu. The central area is used to enter characters. Help functions are provided in the bottom line. Descriptions of how to operate the menu are provided below.

Entering characters

Characters are entered by pressing the keys in the central area.

Once the entry is complete, the process is concluded by pressing the **OK** key and the entry passed on to the Traffic Assist for processing.

Adopting suggestions

When a navigation destination is entered, the Traffic Assist compares the entry with the set of data on the memory card. The Traffic Assist then only makes those letters which are possible available for selection and adds a sensible suggestion to the letters already entered.

The suggestion and the non-selectable characters are shown in a lighter font. If the desired input appears in the upper display area after entering the first few letters or numbers, you can immediately accept this suggestion.

Note:

If necessary, you can switch off the smart speller in the navigation settings.

It should also be noted that in southern countries (e.g. Italy), the "prefix" (e.g. via Gran Mundo) needs to be entered afterwards (e.g. Gran Mundo_via).

→ In order to accept the suggestion, press either the input field or the **OK** button.

Scrolling through the lists

If you have already entered some of the letters of the selection you want, you can use the selection list to display all the destinations containing the combination of letters in question.

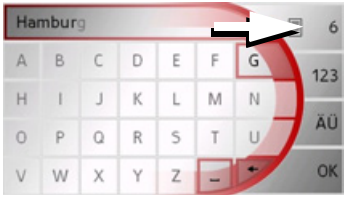

→ To open the selection list, press the button at the top right corner of the screen.

The selection list appears.

→ D
→ GB
→ F
→ I
→ E
→ P
→ NL
→ DK
→ S
→ N
→ FIN
→ TR
→ GR
→ PL
→ CZ
→ H
→ SK

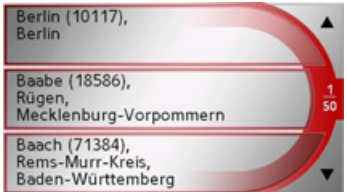

→ Press the ▲ ▼ arrow keys on the right hand side of the screen to scroll through the list.
→ Press the destination you want.
The destination is adopted and the selection list is closed.

Special characters and umlauts

Special characters and umlauts do not have to used when entering the names of towns and streets. The Traffic Assist will change entries from AE, OE and UE if necessary.
→ If e. g. you are searching for the town of "Würzburg, then simply press "WUERZBURG".
Special characters can be useful when naming destinations and routes.

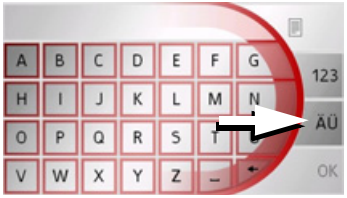

→ To change to the special character keypad, press the ÄÜ key.
The special character keypad is displayed.

→ Enter the special character you want.
As soon as you have entered a special character, the system automatically switches back to the letters keypad.

Entering numbers

You have to change to the numerical keypad to enter numbers.
→ Press the 123 key.
The numerical keypad is displayed.

→ To return to entering letters, press ABC.

Switching between upper and lower case

During free text entry, it is possible to switch between upper and lower case letters.

→ Press abc.

The display changes to lower case.

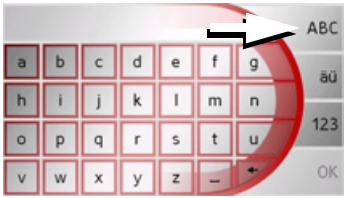

→ In order to return to upper case, press ABC.

Deleting characters

To delete the last character, use the back key.

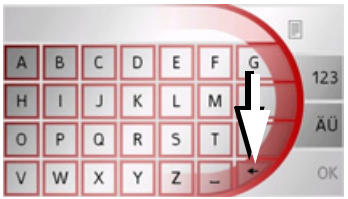

→ To delete the character to the left of the cursor, press the ← key.

Inserting spaces

If you have an entry with two words, e.g. for names of towns, the words should be separated by a space.

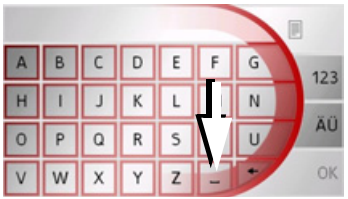

→ To enter a space, press the _ key.

The back key

The back key is integrated in the bottom left hand corner of the casing.

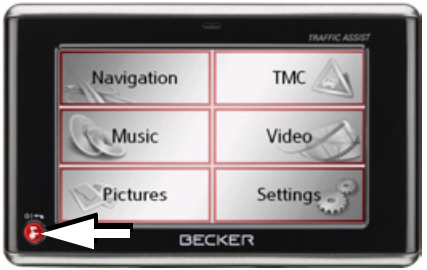

It has various functions:

- Pressing and holding this button switches the Traffic Assist to standby, or on again.
- depending on the menu context, if pressed briefly, you will be returned to the previous entry level.

→ D
→ GB
→ F
→ I
→ E
→ P
→ NL
→ DK
→ S
→ N
→ FIN
→ TR
→ GR
→ PL
→ CZ
→ H
→ SK

25

Sensor button

There are two sensor buttons each on the left and right sides of the touchscreen.

① Telephone sensor button
The telephone function is called up using this sensor button. See “Calling up telephone mode” on page 77.

② Day/night sensor button
The display can be switched between day and night mode using this sensor button.

③ Home address sensor button
Route guidance to the home address is started by pressing this sensor button, provided a home address has been stored. See “The Home address button” on page 62.

④ Map sensor button
Map display is called up using this sensor button. See “Map display” on page 68.

Button lock

The Traffic Assist can be protected from inadvertent inputs via the sensor buttons or the touchscreen via the button lock.

Activating the button lock

→ Press the sensor buttons simultaneously ① and ②.
the button lock is activated.

Now, if you press a button or the screen, a message is displayed indicating that the button lock is active.

Deactivating the button lock

→ Press the sensor buttons simultaneously ① and ②.
the button lock is deactivated.

Volume control

The volume can be adjusted both via the integrated volume control on the Traffic Assist and in the various applications.

Note:

A description of volume adjustment in the various applications is described in the individual chapters.

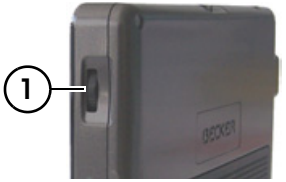

The volume control ① is located on the right side of the unit Traffic Assist.

→ In order to increase or reduce the volume, press the volume control upwards or downwards.

or

→ Press the volume control in order to mute the Traffic Assist.

More maps

The memory card provided has a storage capacity of 2 GB and offers sufficient space for the complete European map set, the Traffic Assist does not support larger memory cards.
If you should lose the supplied memory card or if it should become defective, the map set can be installed on another memory card.

Installation program

There is a map installation program on the map DVD. Once the DVD is inserted in a personal computer's DVD drive, this program will usually start up automatically. The program guides you through the installation process.
Otherwise, you will have to start the program manually.
→ Open Windows® Explorer.
→ Select your DVD drive folder.
→ Double click on the "Setup.exe" file.

Transferring files

Files can be transferred indirectly via the memory card or directly via the USB port.

Note:

Only the maps supplied in the Traffic Assist may be used. The installation or transfer of files or programs which limit or modify the function of the Traffic Assist is prohibited!

Transferring using the SD card reader

The simplest and fastest form of transfer is to use a standard SD card reader (does not fall within the scope of supply). The memory card is plugged into this.
The files required are then saved on the memory card using the computer's software.

Transferring using the USB port

The USB port is used to link the Traffic Assist directly to a personal computer.
The Microsoft® Active Sync program must be installed for transmission. Microsoft® Active Sync is contained on the DVD provided.

The link then involves several steps:
→ Switch off Traffic Assist.
→ Link the Traffic Assist and computer using the USB cable.
→ Switch on Traffic Assist again (do not press the screen after the unit is switched on).
ActiveSync automatically sets up a link to the Traffic Assist.

→ D
→ GB
→ F
→ I
→ E
→ P
→ NL
→ DK
→ S
→ N
→ FIN
→ TR
→ GR
→ PL
→ CZ
→ H
→ SK

→ D
→ GB
→ F
→ I
→ E
→ P
→ NL
→ DK
→ S
→ N
→ FIN
→ TR
→ GR
→ PL
→ CZ
→ H
→ SK

Transferring maps

The installation software from the DVD should be used for the transfer. This involves the following stages:

→ switch off Traffic Assist.
→ remove memory card and plug into an SD card reading device or the use the USB cable to connect the Traffic Assist to the computer.
→ boot up the computer and insert the DVD.
→ use the installation program to transfer the map required.
→ slide the memory card back into the Traffic Assist or correctly remove the USB cable.
→ switch the Traffic Assist back on. The new map is available right away

Transmitting music tracks, pictures and videos

As the complete European map set occupies virtually all the memory space on the memory card provided, pictures, music and videos should be stored on a separate memory card (not included in scope of delivery).

The files can be transferred via a card reader or the USB connection.

Note:

Use obvious folder names because these will help you later when you are trying to find the file you want in the Traffic Assist.

Faults

Faults in the operating system or in the unit are displayed. If the desired function cannot then be executed, the Traffic Assist should be restarted using the On/Off switch or the reset button.

If the messages reappear or the unit does not function correctly for any other reason, please contact your local stockist.

Note:

Never attempt to open the unit yourself. Please contact your authorised dealer if you are unable to remedy the fault.

What is navigation?

Navigation (Latin navigare = to travel by sea) is generally understood to mean finding the position of a vehicle, determining the direction of and distance from the desired destination and establishing and following a route to this destination. Navigational aids include the stars, distinct objects, a compass and satellites.
The Traffic Assist uses its GPS receiver to find the vehicle's position. (The Global Positioning System (GPS) was developed by the US military in the 1970's as a missile guidance system.
GPS is based on a total of 24 satellites circling the earth which continuously emit signals. The GPS receiver receives these signals and uses the delay of each of the signals to calculate its distance from the individual satellites. In turn, it can use this information to determine its current geographical position.

The signals of at least three satellites are needed to establish position. If four or more signals are available, height above sea level can also be calculated).
Traffic Assist determines the direction of and distance to the destination with the aid of a digital road atlas on the SD card and the navigation computer.
For safety, directions to the designation are *mainly provided verbally*. The direction display and map diagram on the touch screen are further aids.

⚠ Safety information

- The road traffic act takes precedence in all circumstances. The navigational system is only an aid. The data/details provided may in some cases be incorrect. The driver must always decide whether to follow the details given or not.
  We accept no liability for the navigational system issuing incorrect details.
- When first started up, it may take up to 30 minutes before a position can be determined.
- Precedence should always be given to actual traffic signs and local traffic rules.
- The directions only relate to cars. Special recommendations and rules for other vehicles (e.g. commercial vehicles) are not taken into consideration.
- Destinations may only be input when the vehicle is stationary.

→ D
→ GB
→ F
→ I
→ E
→ P
→ NL
→ DK
→ S
→ N
→ FIN
→ TR
→ GR
→ PL
→ CZ
→ H
→ SK

Selecting navigation

Navigational mode is called up from the main menu.

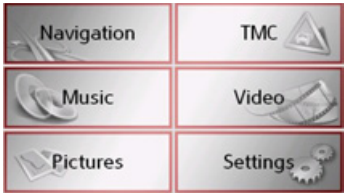

→ Press the **Navigation** key in the main menu.

Rapid access is called up.

Aids for navigation

Three different aids to navigation are available:

- Fast access mode
- Navigation menu
- Map display

Fast access mode

Fast access mode starts automatically for the immediate selection of previously stored destinations.

Navigation menu

The Navigation menu, e.g. for entry of a new destination can be called up using the fast access mode.

See "The Navigation menu" on page 41.

Map display

It is also always possible to call up the map display by pressing the upper right-hand sensor button on the Traffic Assist.

In addition to indicating the current position, the map display also allows the selection of new destinations.

See "Map display" on page 68.

Rapid access

Rapid access allows you to select from the key functions to quickly start navigation. Rapid access is illustrated below using sample destinations.

Structure of rapid access

Navigation menu and map display

In fast access mode, the **Navigation menu** button for opening the Navigation menu is displayed in the top line.

If you have already entered your home address, you can start route guidance to your home address in the second line. Alternatively, you can start navigation to the home address by pressing the relevant sensor button.

The destinations list is shown in the lines below.

→ D
→ GB
→ F
→ I
→ E
→ P
→ NL
→ DK
→ S
→ N
→ FIN
→ TR
→ GR
→ PL
→ CZ
→ H
→ SK

The list of destinations

The list of destinations displays all the destinations available for quick selection line-by-line. If you have already entered your home address, you can start route guidance to your home address in the first line. Each line is split into two boxes. Each list box is depicted as a key. The destination is named on the right-hand key and its characteristics shown in the left-hand icon.

Note:

The last 50 destinations are automatically stored in the destinations list. Once the memory's capacity has been fully used up, the oldest destination is automatically deleted whenever a new one is entered. Important destinations can however be protected.

If you select your home address and it has not yet been defined, you will be requested to enter the address.

Icons used

The following icons are used in the list of destinations.

Icon	*Meaning*
	This destination is a standard destination without any special features.
	This destination is protected. Once the destination memory is full, this destination is not automatically deleted. If required, this can be set manually. In the case of a protected entry, you can also determine the position using the fast access function.
	This destination is the current home address.

Operating rapid access

Starting using an existing destination

Destinations already in the destinations memory are listed in the list of destinations.

→ Press the button with the desired destination to start route calculation.

The calculation is started. Once the calculation is complete, the map display appears and directions to the destination begin.

Scrolling in the destinations memory

You can use the keys to scroll through the list display in the direction indicated on the arrow.

The current list page and the total number of its contents appear between the keys.

Displaying or editing destination

Each destination in the destinations memory can be displayed or edited.

→ Press the icon to the left of the destination required.

→ A selection menu appears.

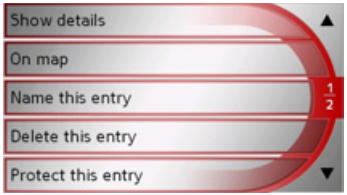

Selection	*Meaning*
Show details	All the data relating to the destination is displayed.
On map	The map display and toolbar are called up and the destination displayed.
Name this entry	The destination can be renamed.
Delete this entry	The destination is deleted from the destination memory.
Protect this entry	The destination is protected against automatic deletion. This function is only available in the case of unprotected destinations.
Unprotect this entry	Protection of the destination is disabled. This function is only available in the case of protected destinations.
Move this entry up	The destination is moved forwards by one position. This function is only available in the case of protected destinations.
Move this entry down	The destination is moved back by one position. This function is only available in the case of protected destinations.
Delete list	All destinations (including the protected ones) are deleted from the list. The home address is not deleted.

Entries in the selection menu which only appear if a home address has been created:

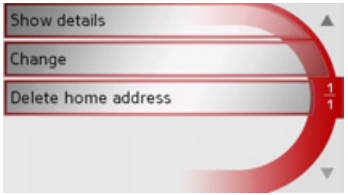

Selection	*Meaning*
Show details	Full home address data is displayed.
Set	If no address has been entered, selection can be made here.
Change	The stored home address can be changed.
Delete home address	The stored home address is deleted.

The Navigation menu

If you do not want to select a destination quickly or if the planned destination is not yet available in the destinations memory, you can use the navigation menu to determine a new destination.

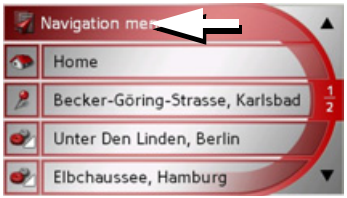

→ In rapid access, press the **Navigation menu** key at the upper edge of the screen.

The navigation menu appears.

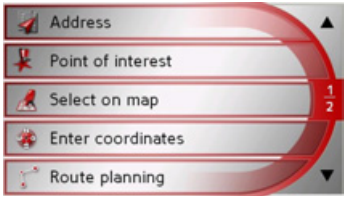

Structure of the navigation menu

Address

The various steps from selecting a destination to starting route guidance can be carried out using the **Address** button.

- See "Navigation menu: Address" on page 42.

Point of interest

Points of interest such as airports and ferry ports, restaurants, hotels, petrol stations or public buildings can be selected and route guidance started via the **Point of interest** button.

- See "Navigation menu: Point of interest" on page 48.

Select on map

With **Select on map**, you can select a destination directly on the map and start route guidance.

- See "Navigation menu: Select on map" on page 51.

Enter coordinates

The geographic coordinates for a destination can be entered and route guidance started via the **Enter coordinates** button.

- See "Navigation menu: Enter coordinates" on page 55.

Route planning

A route with several stopovers can be planned using the **Route planning** button.

- See "Navigation menu: Route planning" on page 52.

Settings

Various general settings for navigation can be made via the **Settings** button.

- See "Navigation menu: Settings" on page 56.

Navigation menu: Address

A selection window for specifying the destination is opened from the Navigation menu by pressing the **Address** key.

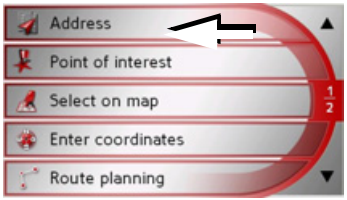

→ In the navigation menu, press the **Address** button.

The selection window for the address appears.

Selecting a country

The **Country** button offers you all the countries available on the memory card for navigation. A country is adopted automatically in the address input menu after selection. If a destination country has already been entered, it appears in the first line and is therefore active.

→ Press the destination **Country** key to access the selection list of countries.

The selection list appears.

→ Press the key of the country you want.

→ If necessary, press the arrow keys on the right-hand edge of the screen to scroll through all the destination countries available.

Note:

Information regarding the various countries is displayed by pressing the flags in front of the country designations.

Select address and start

You can enter the exact destination address in the address entry screen.

The following details can be entered in the address window:

- Town
- Postcode
- Street and building number
- Intersecting roads as an aid to orientation

You can also:

- display the destination on the map
- define options of the drive profile
- save the destination in the destinations memory
- start directions to the destination immediately.

Selecting the town

The destination town can be entered using its name or postcode. During this process, when each letter is entered a possible town is displayed and/or when each character is entered, a possible postcode is displayed. When the towns are displayed, large towns have priority over the alphabetical sequence. Example: If you enter the initial letter “K”, the Traffic Assist indicates “Köln” as a possible city, and not the town which is first alphabetically. Traffic Assist rules out all impossible combinations of letters and postcodes and only activates those boxes of letters and/or characters which will produce an existing town and/or postcode (Smart speller).

→ Select between town entry and post code entry.

→ Consecutively enter the letters for the destination town or the numbers of the post code.

Notes:

- If necessary, you can switch off the smart speller in the navigation settings.
- During entry, it should be noted that in southern Europe (e.g. Italy), the "prefix" (e.g. *via* Gran Mundo) needs to be entered afterwards (e.g. Gran Mundo_via).
- If you enter a post code, the name of the town initially disappears in the input menu. Next, enter the name of the street names. The name of the town is then also displayed.

The OK key

The **OK** key can be used to transfer the destination selected into the route calculation menu. If the destination required appears in the upper edge of the display once the first letters or numbers have been entered, you can transfer the destination immediately with **OK** without using the list function.

→ Press the **OK** key to transfer your destination into the route calculation menu.

Note:

If two words have to be entered, these should be separated by a _ character.

→ D
→ GB
→ F
→ I
→ E
→ P
→ NL
→ DK
→ S
→ N
→ FIN
→ TR
→ GR
→ PL
→ CZ
→ H
→ SK

Using the list of towns

If you have already entered some of the letters of the town you want, you can use the List function to display all the towns containing the combination of letters in question.

→ Press the button at the top right corner of the screen in order to open the list of towns.

→ A town is selected by pressing the corresponding button.

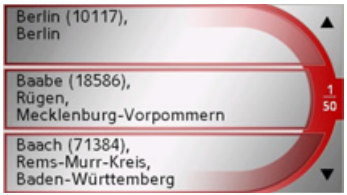

Selecting the street

In the destination street area, the street and building number can be entered separately using a letter and numerical key panel. A possible street is displayed each time a new letter is entered.

Traffic Assist rules out all impossible combinations of letters and only activates those letter boxes which will produce an existing street.

A building number can only be selected once the street has been selected and/or if building numbers are also present in the data.

→ Press the letters of the destination street one another another.

The OK key

The **OK** key can be used to transfer the destination selected into the route calculation menu. If the destination required appears in the upper edge of the display once the first letters or numbers have been entered, you can transfer the destination immediately with **OK** without using the list function.

→ Press the **OK** key to transfer your destination into the route calculation menu.

Using the list of streets

If you have already entered some of the letters of the street you want, you can use the List function to display all the streets containing the combination of letters in question.

→ Press the button at the top right corner of the screen in order to open the list of streets.

→ The street is selected by pressing the corresponding button.

Note:

You can display further information regarding the street by pressing the field to the left of the street name. This can be helpful if the street being searched for appears several times in the list.

Selecting the Intersection

After entering the destination town and road, you can enter an intersecting road in order to further limit the choice.

Note:

Instead of entering an intersecting road, you can also enter a house number. Both entries, however, are not possible simultaneously.

→ Press **Intersection**.

The input menu for the name of the intersecting road appears.

→ Enter the name of the intersecting road and then press **OK**.

The procedure is the same as for entering a road, See “Selecting the street” on page 44..

When entering an intersecting road, you can also use the road list, See “Using the list of streets” on page 45..

Selecting a house number

After entering the destination town and road, you can enter a house number in order to further limit the choice.

Note:

Instead of entering a house number, you can also enter an intersecting road. Both entries, however, are not possible simultaneously.

→ Press **No.**

The input menu for the house number appears.

→ Enter the house number and then press **OK**.

The procedure is essentially the same as for entering a road, See “Selecting the street” on page 44..

→ When entering a house number, you can also use the house number list. The procedure is essentially the same as for the road list, See “Using the list of streets” on page 45..

→ D
→ GB
→ F
→ I
→ E
→ P
→ NL
→ DK
→ S
→ N
→ FIN
→ TR
→ GR
→ PL
→ CZ
→ H
→ SK

→ D
→ GB
→ F
→ I
→ E
→ P
→ NL
→ DK
→ S
→ N
→ FIN
→ TR
→ GR
→ PL
→ CZ
→ H
→ SK

Displaying destination on the map

Once the destination has been entered, you can display it in the map of the surrounding area.

→ Press the **In map** key to display the destination selected on the map.

Options for the drive profile

You can also set your driving profile in the address entry field. Press the **Options** button for this purpose. The settings made here have an effect on calculation of the estimated journey times and the length of the route.

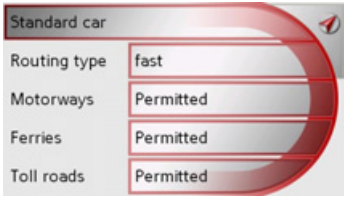

→ After pressing the field at the top left of the screen, select your mode of travel.

→ Select one of the following options by pressing the field on the right next to the **Routing type** display.

Setting	*Meaning*
optimum	With this option, the optimum route in terms of travel time and mileage is calculated.
fast	With this option, the shortest route possible for the time required is calculated.
short	With this option, the shortest route is calculated in terms of kilometres travelled.
scenic	With this option, the most winding route is calculated.

→ Select one of the following options by pressing the field on the right next to the **Motorways**, **Ferries** or **Toll roads** display.

Option:	*Description*
Permitted	With this option, the relevant road type is taken into account during route calculation.
Avoid	With this option, the relevant road type is avoided wherever possible.
Forbidden	With this option, the relevant road type is not taken into account during route calculation.

→ Press the button to start route guidance to the entered coordinates.

Saving destination

The **Save** button opens an entry menu for entering a name for the destination entered. If a name has been entered and adopted using **OK**, the destination is transferred to rapid access and protected there. The entry menu allows you to change between upper and lower case letters.

Starting navigation

The **Start** button can be used to start navigation straight away. All the data entered so far is processed in the route calculation.

→ Press the **Start** key to start navigation.

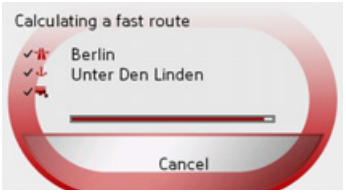

The route is calculated. The map display then appears and directions to the destination begin.

Note:

If no GPS signal is available at the time of route calculation, the following display appears.

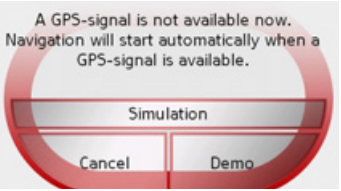

If the GPS signal is available, route calculation is started automatically.

A short route to the selected destination is displayed when **Simulation** is pressed.

A stored demonstration route guidance is displayed when **Demo** is pressed.

→ D
→ GB
→ F
→ I
→ E
→ P
→ NL
→ DK
→ S
→ N
→ FIN
→ TR
→ GR
→ PL
→ CZ
→ H
→ SK

Cancelling navigation

→ Press the BACK button.

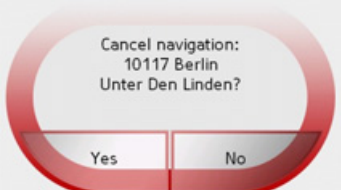

→ Press the **Yes** key to confirm that you want to stop.

Navigation menu: Point of interest

Points of interest, or POI for short (*P*oint *o*f *I*nterest), are included in the map and can be displayed on the map. Points of interest include airports and ferry terminals, restaurants, hotels, petrol stations, public buildings etc. Points of interests can be used as navigational destinations.

Note:

Points of interest from the present surroundings can only be selected if the reception is good enough to locate their position.

You can select between:

- a nearby destination,
- a nationwide destination and
- a destination in a town.

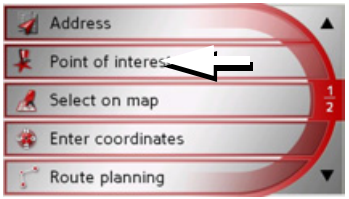

→ Press the **Point of interest** key to display the points of interest.

The search area selection window appears.

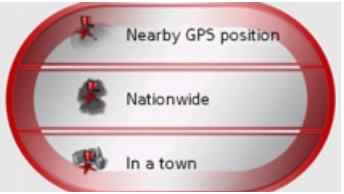

You can now use the buttons to select the search area you want.

Point of interest: Near GPS position

→ Press the **Nearby GPS position** button.

The following specifications are possible for searches in this point of interest window.

→ In the top button, enter the radius (in kilometres) in which a point of interest should be searched for.

→ From the **All categories** box, select a main category (e.g. **Petrol station**). Only those points of interest currently nearby are displayed.
→ Select the subcategory from the subsequent menu (e.g. **Aral**, **Esso**).

You will find information about scrolling in lists in the "Scrolling through the lists" on page 31 chapter.

Note:

If you do not select a subcategory, all the POIs from the main category within the selected radius are displayed.

→ Press the **Point of interest** button to access the input menu.
→ Select the desired POI via the input menu.

For information on working with the input menu, please refer to the section "Entries made with the entry menu" on page 30.

→ For information on scrolling in lists, please refer to the section "Scrolling through the lists" on page 31.

Note:

The *Category* boxes do not have to be. These are only used to restrict the list of points of interest. In large towns, this list may be very long.

Point of interest: nationwide

→ Touch the **Nationwide** button.

→ Select the desired country.
→ Press the **All categories** button.

→ Select the desired category.
→ Touch the **Point of interest** key to go to the entry menu.
→ Select the point of interest you want from the entry menu.

→ D
→ GB
→ F
→ I
→ E
→ P
→ NL
→ DK
→ S
→ N
→ FIN
→ TR
→ GR
→ PL
→ CZ
→ H
→ SK

You will find information about working with the entry menu in the chapter "Entries made with the entry menu" on page 30.
You will find information about scrolling in lists in the "Scrolling through the lists" on page 31 chapter.

Note:

The *Category* box does not have to be completed. It is only used to restrict the list of points of interest. Depending on the map currently being used, this list may be very extensive.

Point of interest: in a town

→ Touch the **In a town** button.

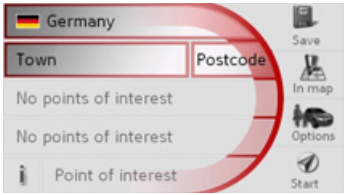

→ Select the desired country.
→ In the **Town** or **Postcode** box enter the town in which you want to search for a point of interest.
→ Press the **All categories** button.
→ Select a main category (e.g. **Culture**). Only the categories available in the town indicated are displayed.
→ Select the subcategory with the subsequent button (e.g. **Museum**).
→ Touch the **Point of interest** key to go to the entry menu.
→ Select the point of interest you want from the entry menu.

You will find information about working with the entry menu in the "Entries made with the entry menu" on page 30 chapter.
You will find information about scrolling in lists in the "Scrolling through the lists" on page 31 chapter.

Note:

The *Category* boxes do not have to be completed. These are only used to restrict the list of points of interest. In large towns, this list may be very long.

Operating options in the POI input menu

Following selection of a POI, the following options are available using the buttons on the right-hand area of the screen:

- Display POIs on the map using the **In map** button.
- Set the options for the driving profile using the **Options** button.
- Save the POI in the destination memory using the **Save** button.

- Start route guidance directly to the POI using the **Start** button.

You can also display information regarding the selected POI.
→ Press the i button for this purpose.

Note:
The button can only be selected if information is actually available.

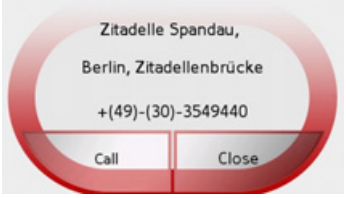

The available information on the selected POI is displayed (exact address and phone number if available).
The displayed phone number can be called directly by pressing the **Call** button, provided a telephone is connected via Bluetooth.

Navigation menu: Select on map

If the destination required cannot yet or can no longer be found in the destinations memory, the **Select on map** button allows you to select it directly.
No address details are asked for in this case.

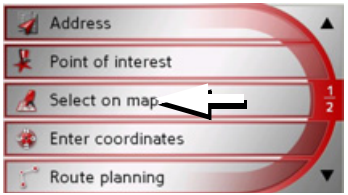

→ Press the **Select on map** key to make a direct selection.
The map display appears.

Note:
You may have to enlarge the area using the zoom buttons + and − in order to find the desired street. You can also find the desired point by moving the map

→ Gently press the screen surface until a circle of dots is drawn around the destination requested. The destination is recorded.

Information on the point selected is loaded from the set of data and displayed. There are buttons under the information box which can be used to call up several functions which are provided for the route point selected.

→ D
→ GB
→ F
→ I
→ E
→ P
→ NL
→ DK
→ S
→ N
→ FIN
→ TR
→ GR
→ PL
→ CZ
→ H
→ SK

When route guidance is deactivated, the following buttons are available:

Button	*Meaning*
Navigation	Starts navigation
Add	Adds the destination of the stored route last used, See "Navigation menu: Route planning" on page 52..
Save	Allows your destination to be given a name via the entry menu and saves this in the destinations memory
Search nearby	Entry menu as for normal POI entries

When directions to the destination is active, the **Interim destination** button is also still available. You can add the selected destination as a stopover for your route guidance from the map.

→ Press a key to undertake the action requested.

Navigation menu: Route planning

The route planning menu allows you to create and select individual routes. For this purpose, enter the individual destination points along the desired route. These points will then be navigated to consecutively without having to make further entries.

→ In *Navigation menu*, press the **Route planning** key to access the route menu.

The map symbol appears at the top right of the route menu. The name of the last programmed route is displayed at the top left and the individual stages of this route appear underneath.

Note:

The route menu is empty following a reset, or if no route has yet been planned.

Route list

Routes already stored in the system are selected from the route list.

→ Press the button in the route menu.

The route list opens.

Scrolling through the list of routes

→ Press the arrow keys on the right hand side of the screen to scroll through the list of routes.

Displaying route details

→ Press button to display the route details.

The *Route details* window opens. You can also rename or delete the route in this window.

Press the BACK button to return to the route list.

Selecting a route

→ Press a route to select it.

The route is loaded and displayed in the route menu.

Using a route

The following buttons are available:

Key	*Meaning*
	Shows all stages inside actual route in the map.
	These keys can be used to scroll up and down through the lists.
New	Opens the "address window" for entering a new destination address
Edit	Activates individual route points for processing
Calculate	Calculates the difference in distance and the journey time for the current entries
Start	Starts navigation

The New button

You can create a new route by pressing the **New** button.

→ Press **New**.

An empty route window appears. The **Add** button appears below this empty window.

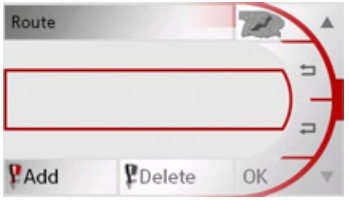

→ Press the **Add** button.

→ Select a destination from the fast access list displayed.

or

→ Switch to the selection between **Address**, **Point of interest** or **Select on map** by pressing the **Other destination** button and then enter the intermediate destination.
→ Repeat these entries in the route planning window for each intermediate destination by pressing **Add**.
→ You can move the individual entries by pressing the buttons.
→ Once all the entries have been made in the route planning window, save the destination data by pressing the **OK** button.

The entry menu appears.

→ Give the destination a meaningful name.
→ Press **OK**.

Route planning is complete. The *Routing options* entry window opens.

The Edit key

Existing routes can be changed in the *Edit* menu.

→ Press the **Edit** key to change existing routes.

The route planning window appears. The following functions are available:

Key	*Meaning*
Add	This box can be used to enter a new route point.
Delete	This box can be used to delete a highlighted route point.
OK	This box can be used to save the processed route and transfer it to rapid access.
	It is possible to scroll up and down in the lists using these buttons.
	Individual entries can be moved using these buttons.

The Calculate key

A planned route can also be calculated without GPS reception so that you can get an overview of the journey.

When doing this, the first route point specified is used as the starting point for the route.

Note:

During navigation, your current location is the starting point used. The first leg is then the journey to the first route point specified.

→ Press the button **Calculate** to have the total distance and probable length of the journey calculated for this route.

The *Routing options* entry window is opened.

→ Define the settings you want.
→ Press the button.
The route is calculated. A window informs you of the progress of the calculation.

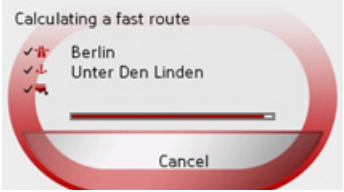

Once the calculation is complete, the total distance from the first to the last points on the route and the probable length of the journey for this route are displayed in the *Route planning* window under the list of route points.



The Start key

→ Press the **Start** key in the route planning menu.
The route options are displayed again.
→ Press the key again to start navigation.

Note:
If no GPS signal is available, route guidance is started automatically as soon as a signal is received.

Navigation menu: Enter coordinates

You can also enter a destination via geographic coordinates.

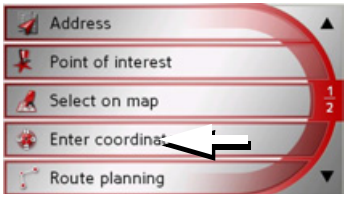

→ Press **Enter coordinates** in the navigation menu.

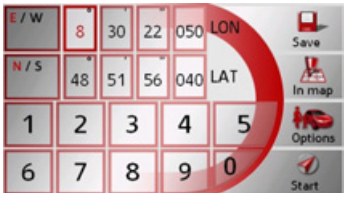

→ Select the value you wish to change.
→ Then enter the desired values using the 1 to 0 buttons.
→ You can set the direction of the longitude and latitude via **LON** and **LAT** using the left-hand buttons in the row.

Note:
The coordinates entered must correspond to WGS84 (World Geodetic System 1984).

→ Press the **Start** button to start route guidance to the entered coordinates.

Navigation menu: Settings

The settings of relevance to the navigation functions can be found in the *Settings* menu.

Note:

All settings must be confirmed by pressing the **OK** key. You can exit the current settings button at any time without saving any changes by pressing the BACK key.

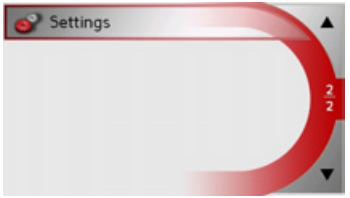

→ Scroll to the menu item **Settings** in the navigation menu using the ▼ button and then press it.

This takes you to the setting menu.

Structure

Various buttons are available in the setting menu:

The functions of the various keys are explained below.

The Auto mode key

You can change the map view settings (2D/3D display, auto zoom and map orientation) in the *Auto mode* settings window.

→ Press **Auto mode** in the settings menu.

The *Auto mode* settings menu appears.

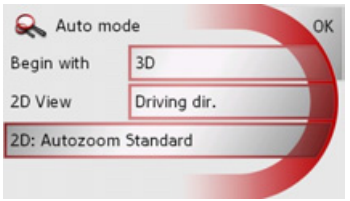

Setting	*Meaning*
Begin with	Select whether the standard map view is to be the 3D or the 2D view.

2D Autozoom	In the case of 2D view navigation, select whether you would like the auto zoom **low**, **normal**, **high** or **no auto zoom** view as standard. With the Autozoom option, the zoom range varies according to your speed: When you drive slowly, the scale is decreased. When you drive faster, the scale is increased.
2D View	In the case of 2D view navigation, select whether the map should be oriented **to the north** or in **the direction of travel** as standard.

→ Confirm your selection by pressing the **OK** key.

The Map info key

In the *Map info* settings window, you can make settings for additional information in the map display.

→ Press **Map info** in the settings menu.

The *Map info* settings menu appears.

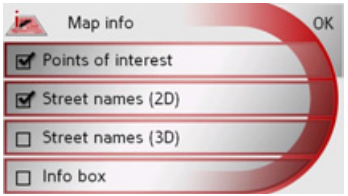

Setting	*Meaning*
Points of interest	If you activate this entry, points of interest are displayed in the map.
Street names (2D)	If you activate the entry, all the street names are displayed in 2D-mode on the map.
Street names (3D)	If you activate the entry, all the street names are displayed in 3D-mode on the map.
Info box	If you activate this entry, you get displayed the point of compass, the speed and the sea level.

→ Press on the desired entry in order to activate ☑ or deactivate ☐ the corresponding function.

→ Confirm your selection by pressing the **OK** key.

→ D
→ GB
→ F
→ I
→ E
→ P
→ NL
→ DK
→ S
→ N
→ FIN
→ TR
→ GR
→ PL
→ CZ
→ H
→ SK

The Routing options key

You can set your drive profile in the *Routing options* settings window. The settings made here have an effect on the route selection and on the calculation of the estimated journey times.

→ Press **Routing options** in the settings menu.



The *Routing options* settings menu appears.

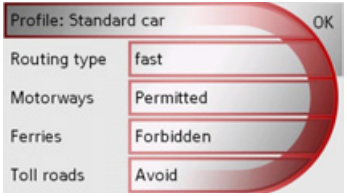

→ Select the mode of travel by repeatedly pressing the **Profile** field.

→ Select one of the following options by pressing the field on the right next to the **Routing type** display.

Setting	*Meaning*
optimum	With this option, the optimum route in terms of travel time and mileage is calculated.
fast	With this option, the shortest route possible for the time required is calculated.
short	With this option, the shortest route is calculated in terms of kilometres travelled.
scenic	With this option, the most winding route is calculated.

→ Select one of the following options by pressing the field on the right next to the **Motorways**, **Ferries** or **Toll roads** display.

Option:	*Description*
Permitted	With this option, the relevant road type is taken into account during route calculation.
Avoid	With this option, the relevant road type is avoided wherever possible.
Forbidden	With this option, the relevant road type is not taken into account during route calculation.

→ Confirm your selection by pressing the **OK** key.

→

The Route info key

In the *Route info* settings window, you can set which additional information you would like displayed during route guidance.

→ Press **Route info** in the settings menu.



The *Route info* settings menu appears.

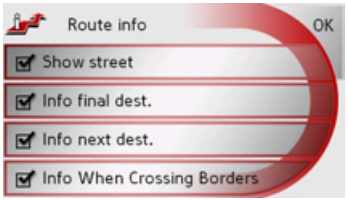

The following settings are possible.

Setting	*Meaning*
Show street	Displays the current/next street
Info final destination	Displays ETA, distance remaining, time until arrival at the main destination.
Info next destination	Displays ETA, distance remaining, time until arrival at the part-way destination.
Info when crossing borders	When this function is activated, you automatically receive general traffic information relating to the relevant country when crossing its national border (e.g. speed limits).

Note:

Some of this information can only be displayed if it is contained in the map material.

→ Press on the desired entry in order to activate ☑ or deactivate ☐ the corresponding function.

→ Confirm your selection by pressing the **OK** key.

The Format key

Using the *Format* configuration window, you can specify which units of measurement to use for time and distance.

→ Press **Format** in the settings menu.

The *Format* settings menu appears.

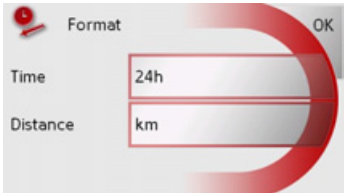

Setting	*Meaning*
Time	Press this field to toggle between the 12-hour and 24-hour clock display.
Distance	Press this field to toggle between the kilometre and mile display.

→ Confirm your settings by hitting the **OK** key.

The Speed key

The settings window *Speed* allows you to display speed limits simultaneously with navigation. You can also set an acoustic warning when speed limits are exceeded.

Note:

The information can only be displayed if it is included in the map data.

→ Press **Speed** in the settings menu.

The *Speed* settings window appears.

The following settings are available.

Setting	*Description*
Show signs	Select whether the speed limits should be displayed never, always or only when the limit is exceeded.
In town	Select the amount over the speed limit at which you would like to receive an acoustic warning within built-up areas.
Out of town	Select the amount over the speed limit at which you would like to receive an acoustic warning outside built-up areas.
Warning	Choose whether you would also like an acoustic warning when you exceed speed limits that are only valid when it is raining, snowing or at specific times of the day (function activated).

→ Press a button and choose the setting you require.
→ Confirm your selection by pressing the **OK** key.

⚠Danger!

Some of the information contained in the map material may be inaccurate due to short-term or recent changes (such as road works, for example).
Supplying information is secondary to the navigation system's main function, which is traffic monitoring and sign-posting.

The Time Zone key

Set the relevant time zone for your region in the *Time Zone* configuration window. This is an important setting for calculating the estimated arrival times.

→ Press **Time Zone** in the settings menu.



The *Time Zone* settings menu appears.

Setting	*Meaning*
Time zone	Specify the relevant time zone for your region.
Summertime	Set whether summer time applies (☑) to the current time zone or not (☐).

→ Confirm your settings by pressing **OK**.

The Smart Speller button

The *Smart Speller* allows you to enter towns, roads or other destinations that you are searching for more quickly using a logical process of elimination.
→ Press **Smart Speller** in the settings menu.

The *Smart Speller* settings menu appears.

→ Press on the button in order to activate ☑ or deactivate ☐ the function.
→ Confirm your entry by pressing **OK**.

The Junction info button

In the *Junction info* settings window you can activate or deactivate the available aids for complex turning manoeuvres, for example at motorway junctions or certain multi-lane roads.

→ Press **Junction info** in the settings menu.

The *Junction info* settings window appears.

Setting	*Description*
Reality View	When the function is activated, realistic images of the current lane situation at motorway junctions are displayed if available.
Signpost info	When this function is enabled, you receive information regarding road signs which you should follow.
Lane info	When this function is activated, a small arrow indicates which lane you should move into on multi-lane roads.

Notes:

- If the Reality View function is activated, the other functions cannot be selected.
- The information can only be displayed if it is included in the map data.

→ Press on the desired entry in order to activate ☑ or deactivate ☐ the corresponding function.

→ Confirm your selection by pressing the **OK** button.

The Home address button

In the *Home address* window, you can enter and change your home address, as well as displaying the address details.

→ Press **Home address** in the settings menu.

You see your home address, provided you have already entered it.

To enter your home address:

→ Press **Set**.

The fast access menu appears.

→ Press on a destination in the list in order to enter it as the home address.

or

→ Press on the **Other destination** button in order to access the navigation menu.

In the navigation menu, you can enter your home address in a different manner (e.g. by entering the address details), See “Structure of the navigation menu” on page 41..

Changing an already entered home address:
→ Press **Change**.
The fast access function appears, further operation is the same as for entering the home address (see above).

The TMC button
You can make settings for the reception of traffic announcements in the *TMC* settings window.
→ Press **TMC** in the settings menu.

The *TMC* settings window appears.

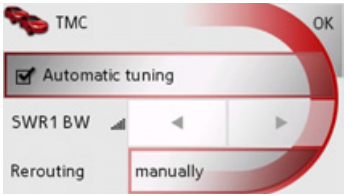

Setting	*Description*
Automatic tuning	Select whether to run an automatic search for the station with the best reception (function activated ☑).
◄ ►	Press the arrow buttons to activate the automatic station search. The currently received TMC station is displayed in the adjacent field. The setting can only be performed if the *Automatic tuning* function is deactivated.
Rerouting	With this button you can select whether the route change **never**, **automatically** or **manually** should be made. (See "Taking announcements into consideration when calculating routes" on page 67.) The setting **never** corresponds to deactivating TMC functionality.

→ Confirm your selection by pressing the **OK** key.

The Volume key

With the *Volume* settings window, you can set the general volume for voice announcements for each start of the Traffic Assist, or switch off voice announcements completely.Depending on the situation, you can also adjust the volume in the map display.

→ Press **Volume** in the settings menu.

The *Volume* settings window appears.

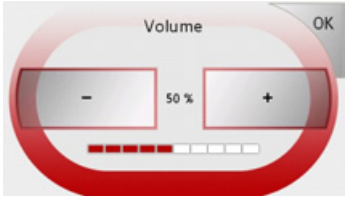

→ The required volume can be selected via the – and + buttons.

→ Confirm your settings by hitting the **OK** key.

The Dimmer button

In the *Dimmer* settings menu you can set whether the display's backlighting should be switched off when you enter a tunnel.

→ Press **Dimmer** in the settings menu.



The *Dimmer* settings menu appears.

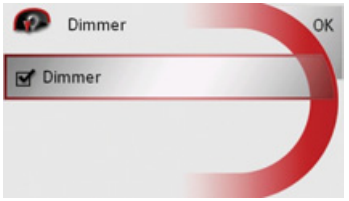

→ Press on the button in order to activate ☑ or deactivate ☐ the function.

→ Confirm your settings by pressing **OK**.

The button Load map

The Traffic Assist operates using the map data stored on the memory card. Pressing the **Load map** button displays the loaded map data.

→ Press **Load map** in the settings menu.

The *Load map* settings menu appears.

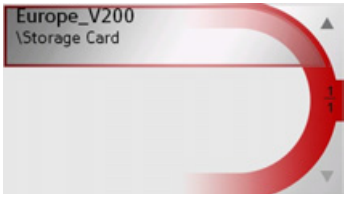

→ Select the desired map by pressing the relevant button.

The Factory settings key

You can use the *Factory settings* configuration window to cancel all new settings and reset the system to the factory settings.

→ Press **Factory settings** in the settings menu.

The *Factory settings* settings menu appears.

→ In order to reset the Traffic Assist to the factory settings, press **Yes**.

What is dynamic route guidance?

Dynamic route guidance calculates the route, while taking into account current traffic announcements.

Note:

Dynamic route guidance is not available for all countries (currently only Belgium, Germany, Denmark, France, Italy, The Netherlands, Austria, Sweden, Switzerland and Spain).
TMC reception must be available in order to activate dynamic navigation and the functions described below.

Traffic announcements are transmitted by radio stations via the TMC (Traffic Message Channel) in addition to the radio programme and are received and analysed by the navigation system. Receiving traffic announcements is free of charge.

Note:

As the traffic announcements are transmitted by radio stations, we cannot assume responsibility for the completeness or accuracy of the announcements.
Austria: The location and event code was made available by ASFINAG and BMVIT.

A continuous check is made for the presence of relevant messages for the selected route. However, traffic problems are also shown on the map even if route guidance is deactivated.

If these continuous checks determine that a traffic announcement is relevant to route guidance, the unit will automatically recalculate a new route to the destination (See “The TMC button” on page 63.).

→ D
→ GB
→ F
→ I
→ E
→ P
→ NL
→ DK
→ S
→ N
→ FIN
→ TR
→ GR
→ PL
→ CZ
→ H
→ SK

Displaying TMC messages on the map

Current TMC messages are displayed on the map graphically. Sections of the route where there are traffic problems are highlighted blue. Arrows continue to be displayed, which indicate the traffic direction which is affected by the traffic problem.

In addition to the coloured mark, a warning sign is displayed on the stretch of road affected.

Using TMC

Once you have connected the TMC antenna, your Traffic Assist will receive current traffic announcements and dynamic route calculation will be enabled (traffic jam diversion). You can also view traffic announcements directly.

To preset the TMC, See "The TMC button" on page 63.

→ In the map display, activate the (see also page 70) toolbar and press .

or

→ In the main menu, press **TMC** (see also page 30).

Note:

The button only becomes visible once you have switched to navigation mode and then called up the main menu again. After switching the Traffic Assist with TMC off and on again via the On/Off switch, the **TMC** button is only visible following the procedure described above.

After pressing one of the two buttons, the message list appears.

You can scroll through the list using the arrow keys on the right–hand edge of the screen.

The road number (motorway, A-road or district roads), section of road if applicable, traffic direction and the type of problem are displayed in each traffic message.

Reading a message

→ Press on the desired message in the list. The message display appears.

If the message text is longer than the display space available, the ... button appears at the bottom right.

→ Press this button in order to view the remaining message text.

→ Press the arrow buttons ▲ ▼ to scroll in the messages.

→ Press the BACK button to return to the message list.

Display the relevant road in the map

→ Press the button in the message display.

The relevant road can be seen in the map.

Updating announcements

→ Press the button in the message display.

Taking announcements into consideration when calculating routes

Your Traffic Assist can take traffic announcements into consideration when calculating a route. You have the option of setting this function to automatic or manual under "The TMC button" on page 63.

Automatic recalculation

If a traffic announcement affects your route, a new route is calculated to bypass the problem at the earliest possible convenience.

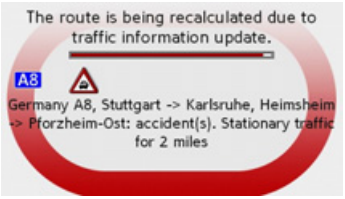
The route is being recalculated due to traffic information update.
A8
Germany A8, Stuttgart -> Karlsruhe, Heimsheim -> Pforzheim-Ost: accident(s). Stationary traffic for 2 miles

Manual recalculation

If a traffic announcement affects your route, a window with detailed information on the traffic announcement appears.

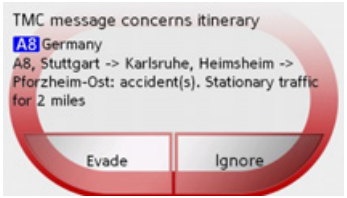
TMC message concerns itinerary
A8 Germany
A8, Stuttgart -> Karlsruhe, Heimsheim -> Pforzheim-Ost: accident(s). Stationary traffic for 2 miles
Evade
Ignore

If you wish to calculate a detour around the traffic problem, press **Evade** or alternatively **Ignore**.

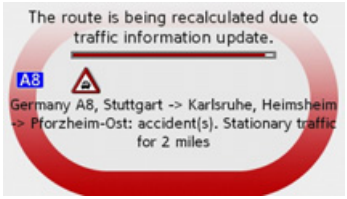
The route is being recalculated due to traffic information update.
A8
Germany A8, Stuttgart -> Karlsruhe, Heimsheim -> Pforzheim-Ost: accident(s). Stationary traffic for 2 miles

Changing status

You can set the function to act upon or ignore an announcement at any time.

→ Activate the toolbar in the map display (see also page 70).

→ Press the button.

The message list appears. Messages which are relevant for your route are listed at the beginning.

→ Press the relevant traffic announcement.

→ Press the button at the bottom of the screen to switch between **Evade** and **Ignore**.

Map display

The map display is called up automatically if navigation is activated.

However, the map display can also be called up if navigation is deactivated.

→ For this purpose, touch the area (1) on the housing of the Traffic Assist.

Note:

In certain menus, the map display can also be called up by pressing the thumbnail of a map. In most cases, this is used to display information such as TMC messages on the map.

Configuration of map display

The configuration depends upon the current operating mode of the Traffic Assist.

Map display without route guidance

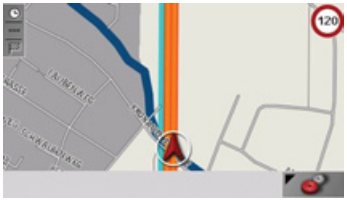

If navigation is deactivated, almost the entire area of the touchscreen is filled by the map display. An icon for opening the toolbar is continuously displayed in the bottom right corner.

If the current position can be determined via GPS, this is indicated by a circle with a red arrow head.

Map display with route guidance

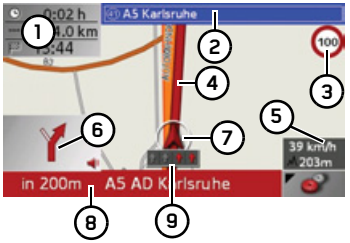

1 Estimated time of arrival, remaining journey time and remaining distance to the destination (can be displayed/hidden by pressing).
2 Road to which the next driving manoeuvre leads
3 Speed limit on the road currently being driven on (display not available for all roads)
4 Route
5 Vehicle speed and altitude above sea level
6 Next driving manoeuvre
7 Vehicle position
8 Distance to next driving manoeuvre and currently travelled road.
9 Traffic lane recommendation (only appears on some multi-lane roads; red arrows = recommended lanes)

Note:

Following the traffic lane recommendations allows you to perform the next driving manoeuvre without changing lanes.

When navigation is active, your current position is displayed on the map via the Position icon.

Depending on the settings in the options mode, the Position icon will remain stationary and the map will move or vice versa.

The information box at the right edge of the display shows your current speed and the altitude in metres. The information box display can be activated/deactivated in the settings as described under "The Map info key" on page 57.

→ D
→ GB
→ F
→ I
→ E
→ P
→ NL
→ DK
→ S
→ N
→ FIN
→ TR
→ GR
→ PL
→ CZ
→ H
→ SK

Information continues to be displayed in the bottom left corner of the preview area.

For this purpose, the further route is displayed via an arrow with distance information given below it. If two driving manoeuvres are to be performed in succession within a short time, an additional smaller arrow for the second driving manoeuvre appears above the first one.

Depending upon the setting, additional information may be shown in the map display. See "Additional information" on page 72.

Map display with reality view

At many motorway junctions, a detailed and realistic display of the motorway junction can be shown.

For this purpose, activate the function *Reality View* in the settings under "The Junction info button" on page 62.

If you are guided via a motorway junction by Traffic Assist, the appropriate display is shown.

Then follow the lanes marked by the red arrows.

Map display with toolbar

Press the following key to activate the toolbar. Press again to deactivate the toolbar.

The following function keys are displayed in addition to the map display.

The following function keys appear in the toolbar:

Icon	*Meaning*
	See "Display route (toolbar)" on page 72.
	See "Displaying TMC messages (toolbar)" on page 73.
	See "Change display (toolbar)" on page 73.
	See "Point northwards (toolbar)" on page 73.
	See "Available POIs along the route (toolbar)" on page 73.
	See "Play" on page 87.

Using the map display

Repeat the last voice prompt

During route guidance, the system announces important information, e.g. the next driving manoeuvre. The last announcement can be repeated with updated information.

→ Press the preview area while route guidance is active and the toolbar deactivated.

The last announcement is repeated with updated information. The volume is also displayed.

Changing the announcement volume

The volume of announcements can be adjusted.

→ Press the preview area while route guidance is active and the toolbar deactivated.

The bar display indicates the volume.

→ Press + or − to increase or decrease the volume.

→ Press in order to mute the announcements.

→ Press again in order to cancel the mute function.

⚠ Warning

Always adjust the volume so that you can still hear any ambient noise while driving.

The bar display disappears again automatically after three seconds if no button is pressed.

Additional information

Depending upon the selected setting, See “The Route info key” on page 59., up to three different information displays are available.

At the left edge of the screen, information (estimated time of arrival, remaining journey time and remaining distance to destination/stopover) regarding the main destination ① and the stopover ② can be displayed/hidden. The left display window shows the hidden information.



In the bottom area of the screen (red lines), the road currently being driven on is displayed, provided that this function is activated.

Position information

If you require information regarding a certain point on the map display, the information window can be opened. This displays information on the selected point (if any is stored in the map data) and provides various functions for further action.

→ Move or zoom the map until you see the desired point.

→ Press and hold on the desired point until the information window appears.

Make the necessary selection as necessary, See “Navigation menu: Select on map” on page 51..

Zooming and the map (toolbar)

The map can be zoomed into in steps via the zoom buttons.

→ Press Zoom in : to expand or "zoom in on the map" and view individual features more closely.

→ Press Zoom out : to "zoom out from the map" and get a broader overview of the area.

Display route (toolbar)

With this map, the map is automatically zoomed out so that the entire route is displayed. The Display route function is only activated when a route has been selected for driving guidance.

→ Press the Route key.

The map is expanded and the specific route destinations are displayed.

Displaying TMC messages (toolbar)

Press this button to display all TMC traffic announcements received from the station you are currently tuned in to.

You have the option of obtaining an overview of the current traffic situation and calculating an alternative route or deleting a previously calculated detour, as required (See “Taking announcements into consideration when calculating routes” on page 67.).

→ Press the TMC announcement button.
A list of TMC announcements opens.
→ Press the arrow buttons on the right of the screen to browse through the list.

Change display (toolbar)

For the map display, 2-D view ① or 3-D view ② are available.

① ②

Change the display using the 3D key.

→ Press the 3D key.
The display is changed. Press the key again to return to the previous display.

Point northwards (toolbar)

Use the compass key to orient the map on the touchscreen towards the north.

→ Press the compass key.
The map is pointed north on the touchscreen.

Available POIs along the route (toolbar)

With the POI button, you can display available POIs along the route and set a POI as a stopover.

→ Press the POI button.
A display of the POIs available along the route appears.

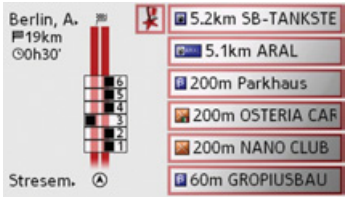

A maximum of six POIs are displayed simultaneously. The example shown has five POIs, two each from the Restaurant and Parking categories and one from the Petrol station category, recognisable by the category icons at the left of the distance indications. The distance indications represent the direct distance to the POIs.

The stylised road on the left indicates on which side of the road the POIs are located. The numbering of the POIs refers to the position of the POIs in the list on the right (POI No. 1 appears at the very bottom of the list).

To select a POI as a stopover:

→ Press the desired POI.

It is set as the stopover and the Traffic Assist starts route calculation to the stopover.

To set a POI category:

You can set which categories the Traffic Assist should take into account when displaying the POIs.

→ Press the POI button.

The current settings are displayed.

→ Press one of the categories set, e.g. Petrol station.

The complete category list appears.

→ If necessary, scroll in the list and press one of the categories which you would like to set as a new category, e.g. **Railway station**.

The current setting is displayed again, the **Petrol Station** category has now been replaced by the **Railway station** category.

→ Proceed in the same manner for the other two categories as necessary.

→ Finally, press **OK**.

An updated display appears of the POIs available along the route, which takes into account the change in categories.

Move map (toolbar)

In move mode, the map can be moved in any direction. Move mode is activated automatically when the toolbar is activated, See “Map display with toolbar” on page 70..

→ With the toolbar activated, press on any point on the map and move it in the desired direction.

The map is then moved accordingly after a short delay.

Note:

If you wait too long before moving the point, the position information regarding the selected point appears on the map, See “Position information” on page 72..

Calling up the options menu (toolbar)

The Options menu offers a range of useful functions.

→ Press the **Options** button.

The options menu appears. This can be closed again via the BACK button or by pressing the sensor button for the map display.

The following options are available.

Selection	*Meaning*
Navi menu	Terminates driving guidance and switches to rapid access mode.
Interim destination	Allows you to enter a interim destination (only if driving guidance is activated). • See "Navigation menu: Address" on page 42.
Next destination	Indicates the next destination, if multiple destinations have been entered (only if driving guidance is activated).
Route options	Allows you to change route options (only if driving guidance is activated). • See "Options for the drive profile" on page 46.

Block road	The driving directions planned by the Traffic Assist may be hindered by unanticipated road blocks. This function notifies the system of the length of a road block. Existing road block lengths may be selected. Once the length has been entered, the route is replanned and new directions given (only if driving guidance is activated).
Country information	Country-specific information, such as the maximum permissible speed, is displayed.
Preferences	• See "Navigation menu: Settings" on page 56.

GPS status	The number of satellites received, your current position and current speed can be displayed using this function. It is also possible to store your current position.

Playback of MP3 files during an active navigation

Previously recorded MP3 files can be played back while an active navigation is in progress.

→ Press .

The MP3 player opens.

You can now play back your music files (refer to "Playback" on page 60).

You can connect your Traffic Assist to a mobile phone equipped with ***Bluetooth***® wireless technology.
The Traffic Assist then serves as a convenient hands-free device.

Notes:

- It is possible that some of the functions described are not available with some mobile phones equipped with ***Bluetooth***® wireless technology.
- If no mobile phone us connected to the Traffic Assist, unusable menu items and entries are displayed as inactive (greyed out).

Calling up telephone mode

Telephone mode is called up via a sensor button.

→ To call up telephone mode, touch the area (1) on the housing of the Traffic Assist.

The telephone fast access function is called up.

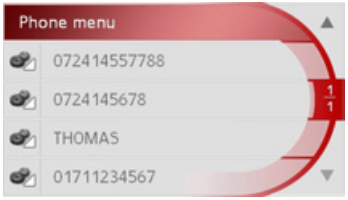

Telephone fast access mode

In fast access mode the last 50 numbers or names which have been dialled, answered or rejected will be displayed in chronological order. Fast access mode is shown below with example telephone numbers and names.

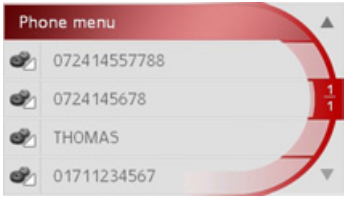

Configuration of fast access mode

In fast access mode, the **Phone menu** button for opening the telephone menu is displayed in the top line. In addition, provided that a telephone has already been connected, the name of telephone and the strength of the received signal is displayed in the first line.
The number list is shown in the line below.

→ D
→ GB
→ F
→ I
→ E
→ P
→ NL
→ DK
→ S
→ N
→ FIN
→ TR
→ GR
→ PL
→ CZ
→ H
→ SK

Number list

The number list displays, line by line, all numbers/names available for fast dialling. Each line of the number list is divided into two fields. Each list field is in the form of a button. The number/name is shown on the right button and the characteristics of the entry are shown using the left icon.

Notes:

- The last 50 numbers/names are automatically stored in the number list. If the storage capacity of 50 numbers is reached, the oldest number is automatically deleted to make room for a new number. However, important numbers can be protected.
- Entries in fast access mode always only apply to the time during which the mobile phone with ***Bluetooth***® wireless technology was connected to the Traffic Assist. The entries in the fast access mode of the Traffic Assist are not synchronised with the call lists in the mobile phone.

Icons used

The following icons are used in the number list:

Icon	*Description*
	This entry is a standard entry with no special features.
	This entry is protected. If the number list is full, this entry is not automatically deleted. This can be performed manually, if required. In the case of a protected entry, you can also determine the position using the fast access function.

Operating in fast access mode

Dialling an existing number

The numbers/names in the number list can be dialled directly.

Notes:

- If no telephone has been previously connected, no entry can be dialled.
- Entries with the name **Unknown** cannot be dialled. These are calls for which no telephone number was transmitted.

→ Press the button with the desired entry in order to start the call.

The call will be started.

Scrolling through the number list

Using the  buttons, it is possible to scroll through the number list in the direction of the relevant arrow.

The current list page and the total number of pages appear between the buttons.

Displaying or editing entries

Each number stored in fast access mode can be displayed and edited.

→ Press the button field to the left of the desired number.

A selection menu appears.

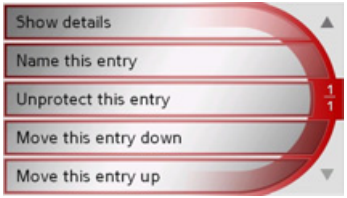

Option	*Description*
Show details	The data for the entry is displayed (number and name, call time and call date, if available).
Name this entry	The entry can be renamed.
Delete this entry	The entry is deleted from the number list.
Protect this entry	The entry is protected against automatic deletion (only available on unprotected devices).

Option	*Description*
Unprotect this entry	Entry protection is disabled (only available on protected devices).
Move this entry up	The entry is moved forward by one position (only available on protected devices).
Move this entry down	The entry is moved back by one position (only available on protected devices).
Delete list	All destinations (including the protected ones) are deleted from the list.

Telephone menu

In the telephone menu, you can dial a number directly, open the telephone book, connect your Traffic Assist to a mobile telephone and perform settings for Bluetooth® operation.

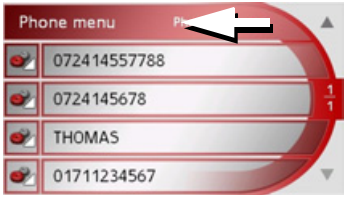

→ In fast access mode, press the **Phone menu** button at the top edge of the screen.

The telephone menu appears.

→ D
→ GB
→ F
→ I
→ E
→ P
→ NL
→ DK
→ S
→ N
→ FIN
→ TR
→ GR
→ PL
→ CZ
→ H
→ SK

Dialling a number

You can enter a telephone number and start a call to this number or store the entered number under any name.

→ In the telephone menu, press the **Dial number** button.

→ Enter the desired telephone number using the displayed buttons.

→ Press the Dial button.

The Traffic Assist tries to establish a connection to the desired telephone number. Detailed instructions for operation can be found under "Telephone calls" on page 84.

By pressing the **Save** button, the entered number can be stored under any name.

Telephone book

The telephone book entries loaded from the SIM card of the mobile phone are displayed in the telephone book. After selecting the desired entry, the corresponding telephone number can be called.

→ In the telephone menu, press the **Phone book** button.

If there are more than 30 entries in the telephone book, an input menu appears. If there are less than 30 entries, a list of entries is displayed directly.

→ Select the initial letter of the desired entry in the input menu.

→ Press the **OK** button when the desired name is displayed in the top line.

The Traffic Assist tries to establish a connection to the desired telephone number. Detailed instructions for operation can be found under "Telephone calls" on page 84.

If the full name has not yet been entered, a list can be called up by pressing the **List** button. In this list, only those entries appear which correspond to the letters entered so far.

→ Press the arrow buttons ▲ ▼ to scroll through the messages.

→ Press on the desired entry.

The Traffic Assist tries to establish a connection to the desired telephone number.

Connecting a mobile phone

In order to be able to make calls with your Traffic Assist, a mobile phone equipped with Bluetooth® wireless technology must be connected. The various options for establishing a connection are described below.

Opening the device list

→ In the telephone menu, press the **Connect phone** button.

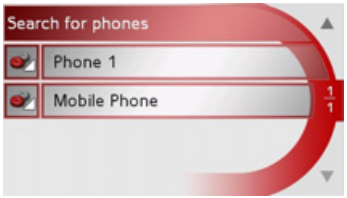

The device list is displayed.
You can search for a mobile phone or connect a mobile phone from the device list.

Note:

If you have not yet established a connection to a mobile phone, the list is empty.

The device list displays, line by line, all devices available for selection.
Each line of the device list is divided into two fields. Each list field is in the form of a button. The device name is shown on the right button and its characteristics are shown using the left icon.

Icon	*Description*
	This device is a standard device with no special features.
	This device is protected. If the device list is full, this device is not automatically deleted. This can be performed manually, if required. In the case of a protected entry, you can also determine the position in the device list.

By pressing the icon, you can open a menu in which, for example, you can protect the device.

Option	*Description*
Show details	The device data is displayed.
Protect this entry	The device is protected against automatic deletion (only available on unprotected devices).
Unprotect this entry	Device protection is disabled (only available on protected devices).
Move this entry up	The device is moved forward by one position (only available on protected devices).
Move this entry down	The device is moved back by one position (only available on protected devices).
Delete this entry	The device is deleted from the device list.

→ D
→ GB
→ F
→ I
→ E
→ P
→ NL
→ DK
→ S
→ N
→ FIN
→ TR
→ GR
→ PL
→ CZ
→ H
→ SK

Option	*Description*
Delete list	All devices (including the protected ones) are deleted from the list.

Connecting automatically

After switching on, your Traffic Assist tries to establish a connection to a mobile phone.

Prerequisites are:

- Bluetooth® is activated on your Traffic Assist (see "Telephone/Bluetooth settings" on page 83).
- The mobile phone to be connected is already in the device list.
- Bluetooth® is activated on the mobile phone.

Searching for a mobile phone

Note:

Before searching, activate Bluetooth® on the mobile phone to be searched for.

→ Open the device list.

→ Press the **Search for phones** button.

The search starts.

During the search, any devices found are displayed and the search can be cancelled by pressing the **Cancel** button.

After the search or after pressing the **Cancel** button, a list of the devices found is displayed.

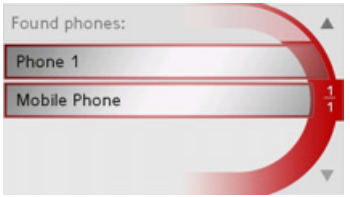

→ Now press on the name of the mobile phone to be connected.

The Traffic Assist then tries to establish the connection. The mobile phone should then prompt you to enter a password. This password is stipulated by the Traffic Assist.

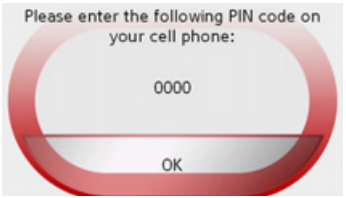

→ Enter the displayed password on the mobile phone.

The connection is established. If the connection is successfully established, the telephone fast access function is displayed.

Connecting from the device list

You can initiate a connection to a mobile phone from the device list. If a mobile phone is already connected, that connection will be terminated and a connection will be established to the selected mobile phone.

→ Open the device list.

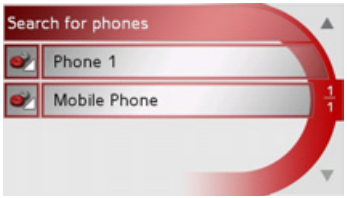

→ Press on the desired mobile phone in the list.

A connection to the selected mobile phone will be established. If the connection is successfully established, the telephone fast access function is displayed.

Telephone/Bluetooth settings

In the telephone/Bluetooth settings, you can activate Bluetooth®, assign a Bluetooth name to your Traffic Assist, set the visibility of your Traffic Assist, and adjust the telephone and ringtone volume.

→ In the telephone menu, press the **Preferences** button.

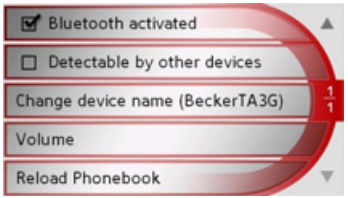

The telephone/Bluetooth settings are displayed.

Switching Bluetooth on/off

Bluetooth must be switched on in order to enable automatic connection to a mobile phone after the Traffic Assist is switched on (see "Connecting automatically" on page 82).

→ Press the **Bluetooth activated** button in the telephone/Bluetooth settings to switch Bluetooth on ☑ or off ☐.

Visibility of the Traffic Assist

Here you can specify whether other Bluetooth devices are to be able to recognise the Traffic Assist or not during a search.

→ Press the **Detectable by other devices** button in the telephone/Bluetooth settings to switch visibility on ☑ or off ☐.

Device name

You can give your Traffic Assist a name. This name will be displayed by other Bluetooth devices.

Note:

The current name is shown in brackets on the **Change device name** button.

→ Press the **Change device name** button in the telephone/Bluetooth settings.

An input menu opens.

→ Enter the desired name.

Setting telephone and ringtone volume

You can set the volume of the call signal.

→ Press the **Volume** button in the telephone/Bluetooth settings.

→ Set the desired value.

Telephone calls

The available operating options when establishing a call, answering a call and ending a call are included under the item Telephone calls.

Establishing a call

→ Enter a telephone number or select an entry from the fast access function or telephone book.

The number is dialled.

Note:

Dialling can be interrupted by pressing the **End call** button.

When the call has been answered at the receiver end, the display changes and you are connected to the other party.

If you have initiated the call from an active navigation, the display returns to the map display.

Note:

The call can be returned to the mobile phone and the hands-free function terminated by pressing the **Privat mode** button.

Answering a call

A ringtone sounds when an incoming call is received. The following display also appears.

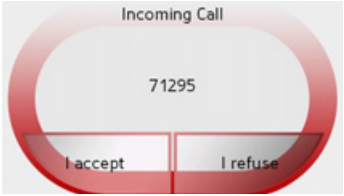

If available, the telephone number and name of the caller are displayed.

Option	*Description*
I accept	The call is accepted. If navigation is active, the device returns to the map display.
I refuse	The call is rejected. The caller hears a busy tone. The last active display is shown.

Note:

The incoming call can be rejected by pressing the BACK button.

Ending a call

How a call is terminated depends on whether route guidance is active or not.

When route guidance is active

→ Touch the sensor button (1) on the housing of the Traffic Assist.

Note:

By pressing and holding the sensor button, (1) the call is terminated without any query being made.

→ End the call by pressing the **End call** button.

The call is terminated and the map display is shown.

Without route guidance

→ Press the **End call** button.

The call is terminated. The last active display is shown.

→ D
→ GB
→ F
→ I
→ E
→ P
→ NL
→ DK
→ S
→ N
→ FIN
→ TR
→ GR
→ PL
→ CZ
→ H
→ SK

Selecting music playback

Music playback is called up from the main menu.

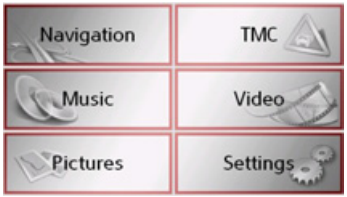

→ Press the **Music** key in the main menu.

Calling up without active navigation
The MP3-Player is called up and appears with its main screen.

- If playback of a music track was stopped previously, that last music track is displayed.
- If this is no longer available, the first track on the memory card is displayed.
- If the memory card contains no tracks, the **No music available** message appears.

The MP3 player

The MP3 files saved on a memory card can be called up and played using the MP3 player.

Note:
Please refer to "Transmitting music tracks, pictures and videos" on page 36" to find out how to save tracks to the internal memory or on to a memory card.

The MP3-Player is shown below along with its standard display and a sample track.

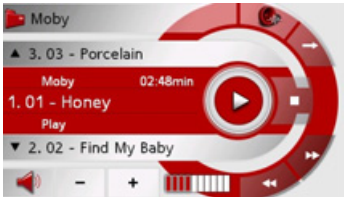

In the central area of the MP3 player, the title of the currently loaded track with the artist's name and the number in the current folder structure is shown in the title line.

Note:
The artist and track name are taken from the ID3 tag of the MP3 file. If the MP3 track played does not have an ID3 tag, the file name of the track is displayed directly.

Operating the MP3-Players

Various key panels are arranged around the track line to simplify operations.

Track skip

The names of the next and previous track are displayed above and below the current music track.
→ Press a track.
The track in the track line is loaded.

- If a piece of music is being played at present, this is stopped and playback of the new track started.

Play

The pieces of music starting from the track displayed in the track line are played when the following key is pressed.

→ Press the key featuring the play icon. The MP3-Player starts playback. The key changes to display the pause icon.
Via the current track display, you see the name of the current artist and, next to it, the playing time of the current track.

Note:

Depending on the bit rate (compression) of the MP3 track, the times displayed may vary slightly from the actual time.

Pause

Playback can be paused at any time and then continued.

→ Press the key featuring the pause icon. Playback is interrupted. The current track is still displayed in the track line. The button display changes to the Playback icon. Playback is continued by pressing again.

Cancelling playback

You can cancel playback

→ Press the button next to the pause icon. Playback is terminated. If you then restart playback, the track is played from the beginning.

Folder overview

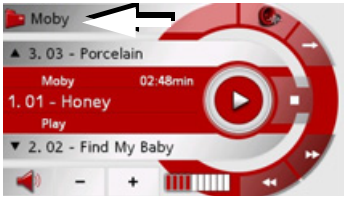

→ Press (see arrow).

The contents of the current folder appears. The file name appears in the top line and below this, any available subfolders and track titles.

→ D
→ GB
→ F
→ I
→ E
→ P
→ NL
→ DK
→ S
→ N
→ FIN
→ TR
→ GR
→ PL
→ CZ
→ H
→ SK

The currently playing track is surrounded by a red frame.

→ Press the button in order to move up one level in the folder structure.

Here also, the name of the current folder appears in the top line and below it the subfolders and the tracks contained.

→ Press on a folder in order to display its contents.

→ Press on a track in order to play it.

Track repeat/random play function

It is possible to have a track continuously repeated or to have the tracks played in random order.

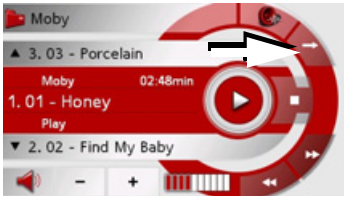

→ Press the button marked with the arrow repeatedly until the desired function is activated.

The displayed icon changes depending upon the selected function.

- Icon - functions are deactivated
- Icon - random play function activated
- Icon - track repeat activated

Setting volume

You can increase or decrease the volume by pressing the + or – buttons.

The set volume is indicated by the bar next to the buttons.

⚠ Warning

Always adjust the volume so that you can still hear any ambient noise while driving.

→ Press + or – to increase or decrease the volume.

→ Press in order to mute the music.

→ Press again in order to cancel the mute function.

Activating FM transmitter

In music mode, you can activate the FM transmitter.

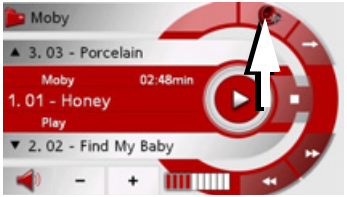

→ Press the button marked with the arrow.

The FM transmitter setting is called up. See “FM transmitter” on page 98.

Note:

Please refer to the instructions for use of the FM transmitter. See “FM transmitter” on page 98.

Navigation during MP3 player operation

You can start or continue an active navigation while the MP3 player is playing music.

→ For this purpose, press the BACK button to exit the MP3 player.

The map display appears if route guidance is activated. If route guidance is not active, the main menu is displayed.

Shutting down the MP3-Player

By pressing the BACK button, the MP3 player is terminated and the main menu is displayed or, if route guidance is activated, the map display appears.

Note:

Bear in mind that music will continue to play when you exit the MP3 menu. Press the pause icon to stop music playback (See “Pause” on page 87.).

Selecting pictures display

The pictures display is called up from the main menu.

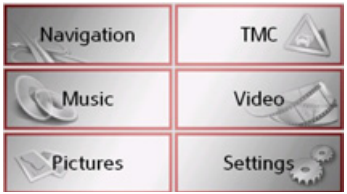

→ Press the **Pictures** key in the main menu.

The Picture Viewer is called up and appears with its main screen.

- If the last image displayed is present on the memory card, this will be displayed in the image area.
- If it is no longer available, the next picture in the same folder is displayed. If there are no pictures in the corresponding folder, no pictures are displayed.
- If the memory card contains no pictures, the **No pictures available** message appears.

The Picture Viewer

Using the picture viewer, the images stored on the memory card of the Traffic Assist (JPG) can be called up and displayed. The Picture Viewer is shown below along with its standard display and a sample picture.

Note:

You can find out how to save image files on a memory card under "Transmitting music tracks, pictures and videos" on page 36.

The picture currently loaded is displayed in the centre of the Picture Viewers.

Operating the Picture Viewers

Various key panels are arranged around the picture display to simplify operations.

Scrolling

The ▾ ▾ keys can be used to scroll in the direction indicated by the arrow and to therefore move between the pictures at the current folder level.

Slideshow

During the slideshow, all pictures from the current folder level are automatically displayed one after another. The slideshow can be started using the following key.

→ Press the key featuring the slideshow icon.

A prompt appears once all images have been displayed.

→ If you wish to repeat the slide show, press **Yes**.

→ If you wish to end the slide show, press **No**.

The slide show will be repeated automatically if no buttons are pressed.

Press the BACK button to end the slide show.

Full screen

In full screen mode, the current picture is enlarged to fill the entire touch screen. Full screen mode can be started using the following keys.

→ Press the button with the full-screen icon.

or

→ Press on the displayed image.

The image display changes to full screen and initiates the slide show with the displayed image of the current folder level.

By pressing the left-hand or right-hand touchscreen surface, the previous or next image in the current folder level is displayed.

You can return to the standard screen by pressing the BACK key.

Shutting down the Picture Viewer

Press the back key to shut down the Picture Viewer. The main menu appears.

Folder viewing mode

The folder level of the displayed image is shown in a button field above the image displayed in the picture viewer.

→ Press the key panel.

Folder viewing mode appears.

In this viewing mode, the name of the current folder level is displayed in the top line. It content appears in the list provided below the line.

The list fields are also displayed as buttons. Pictures and sub-folders are displayed along with their names.

→ D
→ GB
→ F
→ I
→ E
→ P
→ NL
→ DK
→ S
→ N
→ FIN
→ TR
→ GR
→ PL
→ CZ
→ H
→ SK

Operating folder viewing mode

Subfolders

All folders containing image files are included in the folder overview.

Scrolling

You can use the keys to scroll through the list display in the direction indicated by the arrow.
The current list page and the total number of its contents appear between the keys.

Selecting a picture

You can load a picture from the list straight into the Picture Viewer.

→ Press the button of the picture you want.

Folder viewing mode is closed and the Picture Viewer appears along without the picture requested.

Changing folder levels

With the button, you can move to the next highest folder level.
Press the appropriate button to display a subfolder´s contents.

Closing folder viewing mode

The folder overview is closed by pressing the BACK button.

Setting the volume

The volume of music playback can be increased or decreased via the + or – buttons.
The set volume is indicated by the bar next to the buttons.

⚠Warning.

Always adjust the volume so that you can still hear any ambient noise while driving.

→ Press the + or – buttons to increase or decrease the volume.

→ Press the button in order to mute the music.

Press the button again in order to cancel the mute function.

Selecting video playback

Video playback is called up from the main menu.

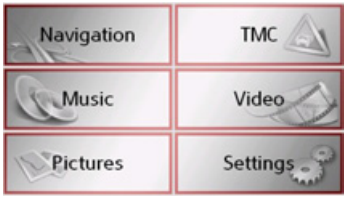

→ In the main menu, press **Video**.
The video player is called up and appears with its main display.

- If the last video played is present on the Memory Card, this will be displayed on the video player.
- If this is no longer available, the next video in the same folder is displayed. If there are no videos in the relevant folder, the blank video player display is shown.
- If the Memory Card does not contain any videos, the message **No video available** appears.

The video player

The videos stored on the Memory Card can be played using the video player.
The Traffic Assist supports the following video formats:

- MPEG1
- WMV

Note:

You can find out how to store videos on a Memory Card under "Transmitting music tracks, pictures and videos" on page 36".

The following is an example video player display with a video playing.

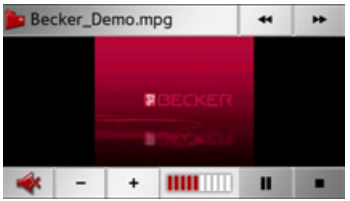

Operating the video player

Opening and playing videos

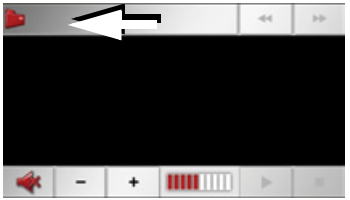

→ Press the folder button (see arrow).

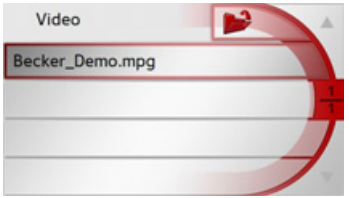

The contents of the current folder appears. The folder name appears in the top line and below this, any available subfolders and videos. The currently playing video is surrounded by a red frame.
→ Press the folder button at the top right in order to move up one level in the folder structure.

→ D
→ GB
→ F
→ I
→ E
→ P
→ NL
→ DK
→ S
→ N
→ FIN
→ TR
→ GR
→ PL
→ CZ
→ H
→ SK

→ D
→ GB
→ F
→ I
→ E
→ P
→ NL
→ DK
→ S
→ N
→ FIN
→ TR
→ GR
→ PL
→ CZ
→ H
→ SK

Here as well, the name of the current folder appears in the top line and underneath it the subfolders and then the videos which it contains.

→ Press on a folder in order to display its contents.

→ Press on a video in order to play it.

Showing the button bar while video is playing

The button bar is in the lower and upper area of the video player display. The button bar is automatically hidden after a certain video running time.

→ Press on any point on the display in order to show the button bar again.

Pausing and resuming playback

The following buttons are used for this purpose:

→ Display the button bar.

→ Press the ■ button to stop playback.

Depiction of the button changes to ▶.

→ Press the ▶ button to resume playback.

Depiction of the button changes to ■.

Fast forward/reverse

The following buttons are used for this purpose:

→ Display the button bar.

→ Press the ▸▸ button for fast forward.

→ Press the ◂◂ button for fast reverse.

→ Press the ▶ button to end fast forward or reverse.

Setting the volume

The following buttons are used for this purpose:

→ Show the button bar.

→ Press − to reduce the volume and + to increase the volume.

→ Press in order to activate or to cancel the mute function.

Selecting the settings

You can pre-select various basic settings for all applications of the Traffic Assist.

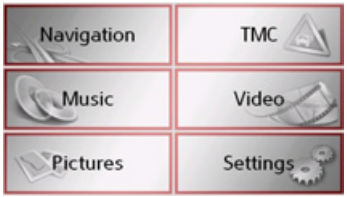

→ Push the button **Settings** in the main menu.

This calls up the setting menu for the further selections.

The setting menu

The various setting possibilities can be selected from the setting menu.

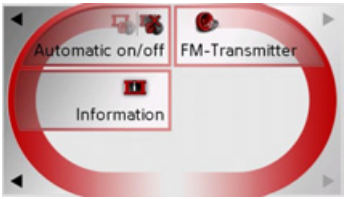

Operation

Selection possibilities

The desired selection is chosen by pushing the desired button. The funtionality of the buttons varies according to the selection and is described under "The individual menu points" on page 95.

You can jump to the next or previous page of the settings by pressing the ▶ and ◀ buttons.

Closing the setting menu

The setting menu is closed by pushing the back button, and the main menu then appears.

The individual menu points

Energy

Your Traffic Assist may be operated using an external power supply unit or using an integrated rechargeable battery.

Note:

The current charge condition is particularly important when operating from batteries. If there is insufficient energy, then the navigational aid cannot be maintained until the destination is reached, for example.

The energy supply and its condition is visualised using the status display.

Displaying the energy supply

The status display can be called up using the following button.

→ Push the button **Energy**.

The status display is called up and the energy supply is visualised.

The charge condition is displayed using the level gauge. In the example, the battery still has a charge of two thirds of its capacity.
The charging operation is indicated by the mains socket symbol in the status display.

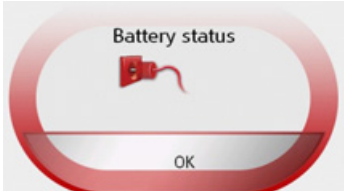

Ending the status display

By pushing the button **OK** the status display is ended and the setting menu appears.

Day/night display

Using the following button, you can change between the day and night screen displays:





→ Press the **Brightness** button.
The brightness of the screen display changes from day to night display or vice versa.
The icon for the active setting is highlighted.

- Left icon: Day display
- Right icon: Night display

Calibration

If the touch-screen reacts incorrectly to the touching of the screen in specific areas, calibration is required.

Starting calibration

The calibration can be started using the following button.

→ Push the button **Calibration**.
The calibration process is started.
You will be guided through the procedure by means of text instructions.

Language

The text of the touch-screen images can be displayed in various languages.

Calling up language selection

The following button allows selection of various different languages.

→ Push the button **Language**.
The language selection appears.

In the language selection, the available languages are shown in a list which extends over several pages. Each list area is a contact surface. The individual contact surfaces are marked with the language designation and the associated national flag.

Turn the page

These buttons allow page turning in the direction shown by the arrow through the pages of the list.
The current page of the list and the total number of pages is shown between the buttons.

Selecting the language

If you change the language the software restarts.

→ Push the contact area of the desired language.

Cancelling the language selection

The language selection is closed by pushing the back button, and the setting menu then appears.

Moodlight

Using this button, the light bars on the side can be switched on, switched to red or blue, or switched off completely.







→ Push the button **Mood light**.
The light bars are controlled accordingly.

Note:

Please deactivate the Becker moodlights while driving in your vehicle in order to prevent visual distraction from the road traffic!

→ D
→ GB
→ F
→ I
→ E
→ P
→ NL
→ DK
→ S
→ N
→ FIN
→ TR
→ GR
→ PL
→ CZ
→ H
→ SK

Tones

You can switch the Traffic Assist signal tones on and off. This can also be effected by clicking on the display buttons.

→ Press **Tones**.

Depending on the previous setting, the signal tones are switched on or off. The current setting is indicated via display of the relevant icon in colour.



- Left icon: Tones switched on
- Right icon: Tones switched off

Automatic on/off

The Traffic Assist can switch automatically to sleep mode when the vehicle ignition is switched off.

Prerequisite:

- The Traffic Assist must be connected to the vehicle cigarette lighter (see also page 23).
- The cigarette lighter is de-energized after the ignition is switched off.
- The relevant function can be switched on at the Traffic Assist.

Switching the function on / off

→ Press **Automatic on/off**.

Depending on the previous setting, the function will be switched on or off. The current setting is indicated via display of the relevant icon in colour.





- Left icon: The function is switched on, the Traffic Assist does switch off automatically.
- Right icon: The function is switched off, the Traffic Assist does not switch off automatically.

FM transmitter

Note:

Operation of the FM transmitter is not permitted in all countries. The use of the FM transmitter in countries in which operation is not permitted, may result in criminal prosecution.

During activation of the transmitter, you are prompted to declare in which country the transmitter is to be operated. You then receive information as to whether the use of the FM transmitter is permitted in this country. Please note that this information is only valid at the time of delivery of the Traffic Assist. Subsequent changes are not taken into account.

Please also note that when crossing borders, other laws and regulations may apply which prohibit the use of the transmitter.

If the FM transmitter function is activated, all audio outputs (e.g. navigation voice announcements, music) of the Traffic Assist are transmitted on a certain radio frequency. If the corresponding frequency is now set on the installed radio, the audio output of the Traffic Assist can be heard via the radio.

Up to five different frequencies can be stored which can then be selected depending upon the current reception.

Note:

Before setting the frequency, check which frequencies in your reception range are unused. You can thus prevent a powerful radio station being superimposed on the audio transmission.

→ Press the **FM-Transmitter** button.

In which country would you like to use the Transmitter? In some countries the use is forbidden or only limited permitted.
Select country
Cancel

→ Please observe the displayed instruction and select between **Select country** and **Cancel**.

If **Select country** is selected, a selection list containing countries is displayed.

→ Scroll through the list using the ▲ ▼ buttons in order to search for the desired country.

→ Press the button with the desired country.

You then receive information as to whether the FM transmitter may be used in this country.

If use is permitted, press the **OK** button in order to access the Settings menu.

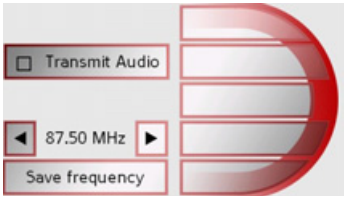

→ Set the desired frequency using the ◄ and ► buttons.

or

→ Select a previously stored frequency using the buttons on the right side of the display.

→ Press the **Transmit Audio** button in order to activate transmission.

Press the **Transmit Audio** button again in order to end transmission of the audio output.

Storing frequencies

You can store up to 5 frequencies.

→ For this purpose, set the frequency as previously described.

→ Then press the **Save frequency** button.

The frequency is stored on the top right button.

Note:

If all buttons on the right side have already been assigned a frequency, the frequency of the bottom button is automatically deleted when a new frequency is stored.

→ D
→ GB
→ F
→ I
→ E
→ P
→ NL
→ DK
→ S
→ N
→ FIN
→ TR
→ GR
→ PL
→ CZ
→ H
→ SK

Information

Information concerning the Traffic Assist is displayed using the following buttons.

→ Push the button **Information**.
The information display appears.

Please note particularly the product designation and the details of the software version. Always quote these details in the event of queries with Harman/Becker service department.

Active Sync
Active Sync is a Microsoft product. This is the standard synchronisation software for Windows mobile units such as your Traffic Assist. The programme can be downloaded free-of-charge from the internet.

Bluetooth
Technology for wireless data transmission over short distances of up to approx. 10 metres.

GMT
(*G*reenwich *M*ean *T*ime)
Central European Time
The standard time at 0 degrees of longitude (the longitude which passes through Greenwich, Great Britain). This time is used worldwide for the synchronisation of data collection.

GPS
(*G*lobal *P*ositioning *S*ystem)
GPS determines your actual geographical position by the use of satellites. It is based on 24 satellites which orbit the Earth and emit signals. The GPS receiver receives these signals and calculates the distance to each satellite from the running time differences and thus evaluates its actual current position in terms of geographical length and width. In order to determine the position, signals from at least three satellites are required, and the fourth one allows the height to be determined.

HDOP
(*H*orizontal *D*ilution *O*f *P*recision)
HDOP states the quality of the positional dtermination. In theory, values from 0 to 50 are possible, whereby the following applies: the smaller the value the more accurate the positioning (value 0= no deviation from the actual position). Values of up to 8 are acceptable for navigation units.

ID3-Tag
„Index of Contents" of an MP3 title. Contains information such as title, artist, album, year and genre.

JPG/JPEG
(*J*oint *P*hotographic *E*xperts *G*roup)
The JPEG is the most common type of storage format for dissipating picture compression., i.e. when compressing, details of the picture are lost. Still provides good picture quality despite compression, compression stages are selectable. It is the most common format for representation and exchange of pictures on the internet.

MP3
Special compression process for audio data (e.g. music).

→ D
→ GB
→ F
→ I
→ E
→ P
→ NL
→ DK
→ S
→ N
→ FIN
→ TR
→ GR
→ PL
→ CZ
→ H
→ SK

→ D
→ GB
→ F
→ I
→ E
→ P
→ NL
→ DK
→ S
→ N
→ FIN
→ TR
→ GR
→ PL
→ CZ
→ H
→ SK

File
Index
File on a CD/storage card/microdrive which contains MPS titles.

SD Card
(*S*ecure *D*igital)
The Secure Digital Card was developed in 2001 by SanDisk on the basis of the older MMC standard. An SD card is a re-writable change-over storage card.

Stylus
A stylus is an input pointer which is used for the operation of touch-screens, mobile phones or PDAs.
The stylus consists basically of a plastic pointer with a softer plastic core. The sleeve is hard and can be gripped and the softer core emerges at the tip and is designed to touch the screen as softly as possible (i.e. without the danger of scratching the screen).
The stylus is more accurate than operation using the fingers, since only the thin tip touches the screen. In addition, dirty marks on the screen caused by finger prints are avoided.

TMC
(*T*raffic *M*essage *C*hannel)
Traffic announcements transmitted by most FM stations via RDS. Basis for dynamic navigation.

USB
(*U*niversal *S*erial *B*us)
The Universal Serial Bus (USB) is a bus sytem for interconnection of a computer with external USB peripherals for the exchange of data.

A

Active Sync 35, 101
Adjusting the volume 63, 65
Autozoom 57

B

Bluetooth settings 83
Button lock 34

C

Calling a POI 51
Calling up without active navigation 86
Cancelling playback 87
Changing folder levels 92
Closing folder viewing mode 92

D

Day display 34
Daylight saving time 61
Destination memory
  changing 78
  POIs 50
Destination selection
  Entering address 42
  from map 51
  Point of interest 48
Destinations
  home address 39
  protected 39, 81
  save 47
  standard 39, 81
Destinations memory 39
  changing 39, 40
  scrolling 39
Dialling a number 80
Display 56
  Day display 34
  Night display 34
Display street names 59
Displaying current street 59
Distance to destination 59
Drive profile 46

E

Entering
  destinations 41
Entering address 42
ETA 59

F

Fast access mode
  Icons 78
Fast route 46, 58
Ferry 46, 58
File 102
Folder viewing mode 91
Full screen 91

G

GMT 101
GPS 101

H

HDOP 101

I

ID3 tag 86
ID3-Tag 101
Intended use 6
Intersecting road 45

J

JPG/JPEG 101

L

List of destinations 39
List of routes
edit 53
new route 53
Lists
Destinations list 38
List of streets 45
List of towns 44
Telephone numbers 77

M

Main menu 30
Map display 38
2D, 3D 56
Current position 38
Destination displays 46
POIs 50
Memory Card 101
Memory card 20
Motorway 46, 58
MP3 . . . . . 86, 101
MP3 player 86
calling up 86
shutting down 89
Music 86

N

Navigation 37
Fast access mode 38
starting 47
Stopping 48
Navigation menu 38, 41
structure 41
Night display 34
Number list 78
Dialling a number 78
editing 79
scrolling 78

O

Operating folder viewing mode 92
optimum route 46, 58

P

Part-way destination 52
Pause 87
Picture Viewer 90
shutting down 91
Picture viewer 93
Play 87
Points of interest 48
display on the map 59
nearby 48

R

Rapid access 39
Icons 39
Reality view 62, 70
Repeat current track 87
Restrictions
Ferry 46, 58
Route
deleting 52
fast 46, 58
renaming 52
short 46, 58
Type of 58
Winding 46, 58
Route planning 41, 52

S

Safety information 6, 37
Scroll
in image folder 93
Scrolling
in lists 92
in the pictures folder 90
SD card 20
Select image display 93
Selecting a picture 92
Selecting pictures display 90

Selecting street 44
Selecting town 43
Sensor button 15
Sensor buttons 34
Set the volume 92
Setting the volume 71
Setting volume 88
Settings
for navigation 41, 56
Short route 46, 58
Shutting down the Picture Viewer . . .91
Slideshow 90
Speed limit 60
Stylus 102

T

Telephone book 80
Telephone fast access mode 78
Telephone menu 77, 79
Telephone mode 77
Time format 59
Time of arrival 59
Time zone 61
TMC 65
Display on the map 66
Recalculating routes 67
Settings 63
TMC antenna 26
Toll road 46, 58
Travel time 59
Travel time remaining 59
Type of route 58
Type of routing 58

U

Units of measurement 59
USB 102

V

Volume control 34

W

Warnings
Speed limit 60

→ D
→ GB
→ F
→ I
→ E
→ P
→ NL
→ DK
→ S
→ N
→ FIN
→ TR
→ GR
→ PL
→ CZ
→ H
→ SK

TECHNICAL DATA

→ D
→ GB
→ F
→ I
→ E
→ P
→ NL
→ DK
→ S
→ N
→ FIN
→ TR
→ GR
→ PL
→ CZ
→ H
→ SK

- *Dimensions:*
  (W x H x D) in mm 147 x 93 x 19
- *Weight:*
  287 grams
- *Processor:*
  400 MHz Processor RISC-architecture
- *Screen:*
  4.8 Inch
  Touch-Screen with 16 Bit colour depth
  65536 Colours
  Low reflection values
- *Storage:*
  128 MB Flash Storage
  128 MB SD-RAM
- *SD Card Reader:*
  Support up to 2 GB
  FAT 16 formatted
- *USB Interface:*
  USB 1.1
  MINI USB
- *Headphone output:*
  3.5 mm Stereo Socket
- *2 Internal speakers*:
  2 Watt max.
- *Power supply voltage:*
  5 Volt DC via USB connection
- *AC Adapter*:
  110 - 230 Volt
  0.2 Ampere
  50 - 60 Hz
  Output Voltage: 5Volt

Dear customer,
In conformance with current EC guidelines, any person may operate this unit. This unit conforms to the current valid European or harmonised national standards. This designation is your guarantee that the unit conforms to the applicable specifications regarding electromagnetic compatibility. This means that interference with other electrical/electronic devices caused by the unit, or interference with this unit caused by other electrical/electronic devices, is largely prevented.

The EC type-approval mark (E13) issued by Luxembourg's Road Traffic Registration Authority in accordance with European Directive ECE-R10 governing the EMC of motor vehicles in its current version authorises installation and operation of the unit in motor vehicles (classes L, M, N and O).

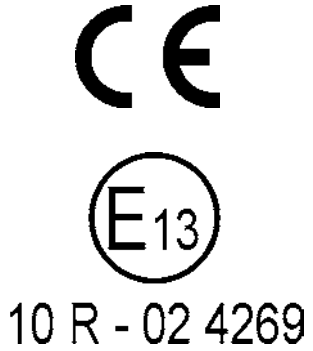

EU Declaration of Conformity

Harman/Becker Automotive Systems GmbH declares herewith that Traffic Assist conforms to the basic requirements of the applicable EU guidelines and in particular conforms to the basic requirements and the other relevant regulations of the R&TTE Directive 1999/5/EU.

You can find a comprehensive EU Declaration of Conformity on our website http://www.mybecker.com under the "Downloads" area for the respective product.

→ D
→ GB
→ F
→ I
→ E
→ P
→ NL
→ DK
→ S
→ N
→ FIN
→ TR
→ GR
→ PL
→ CZ
→ H
→ SK

→ D
→ GB
→ F
→ I
→ E
→ P
→ NL
→ DK
→ S
→ N
→ FIN
→ TR
→ GR
→ PL
→ CZ
→ H
→ SK

Disposal

Customer information on the disposal of electrical and electronic devices (private households)

In accordance with the self-imposed principles of Harman/Becker Automotive Systems GmbH, the product has been developed and made from high-quality, recyclable materials and components.

This symbol on the product and/or accompanying documents means that at the end of their life electrical and electronic products must be disposed of separately from domestic waste. Please take these products to communal collecting points or recycling centres for processing and salvage of materials. The units will be accepted there free of charge.

The proper disposal of this product helps protect the environment and prevents harmful effects on humans and the environment which could result from improper handling.

More detailed information on the nearest collecting point or the nearest recycling centre can be obtained from your local council.

For commercial customers in the European Union

Please contact your dealer or supplier if you would like to dispose of this electrical/electronic equipment.

Information on disposal in countries outside of the European Union

This symbol is only valid within the European Union.